

Modbus for Grundfos pumps

CIM/CIU 200 Modbus RTU

CIM/CIU 260 3G/4G cellular

CIM/CIU 500 Ethernet for Modbus TCP

Functional profile and user manual



Modbus for Grundfos pumps

English (GB)
Functional profile and user manual 4
Appendix A 53

English (GB) Functional profile and user manual

Original functional profile and user manual

Table of contents

1. General information	4
1.1 Hazard statements	4
1.2 Notes	5
2. Introduction	5
2.1 About this functional profile	5
2.2 Assumptions	5
2.3 Definitions and abbreviations	5
3. System description	6
3.1 Modbus	6
3.2 CIM 200 Modbus RTU	6
3.3 CIM 260 3G/4G cellular Modbus	6
3.4 CIM 500 Modbus TCP	6
4. Specifications	7
4.1 CIM module	7
4.2 CIM 200 Modbus RTU	7
4.3 CIM 260 3G/4G cellular	8
4.4 CIM 500 Modbus TCP	8
5. CIM 200 Modbus RTU setup	9
5.1 Setting the Modbus transmission speed	9
5.2 Setting the stop bits and the parity bit	10
5.3 Modbus address selection	10
5.4 Termination resistor	10
5.5 Status LEDs	11
6. CIM 260 3G/4G cellular Modbus setup	11
6.1 Installation	11
6.2 Status LEDs	13
7. CIM 500 Modbus TCP setup	13
7.1 Connecting the Ethernet cable	13
7.2 Setting the Industrial Ethernet protocol	14
7.3 Setting the IP addresses	14
7.4 Establish a connection to the webserver	14
7.5 Status LEDs	14
7.6 DATA and LINK LEDs	15
8. Modbus function code overview	15
9. Modbus register addresses	16
9.1 Register block overview	16
9.2 CIM configuration register block	16
9.3 CIM status register block	18
9.4 Cellular network Real Time Clock	19
9.5 Pump control register block	20
9.6 Pump status register block	22
9.7 Pump data register block	25
9.8 Sensor-dependent measurements	27
9.9 Alarm simulation register block (not CUE)	28
9.10 User register block	28
10. Detailed descriptions of registers	29
10.1 Control mode	29
10.2 Setpoint in closed-loop control	30
10.3 Setpoint in open-loop control	30
10.4 Alarms and warnings	31
11. Modbus RTU commissioning, step-by-step guides	32
11.1 Hardware setup, CIM 200	32
11.2 Hardware setup, CIU 200	32
11.3 Hardware setup, CIM 260 data connection	32
11.4 Hardware setup, CIU 260 data connection	33
11.5 CIM 500 Modbus TCP communication setup	33
11.6 CIU 500 Modbus TCP communication setup	34
12. Detailed descriptions of functionality	34
12.1 APN	34

13. Modbus RTU telegram examples	37
13.1 Modbus telegram overview	37
13.2 Read holding registers, 0x03	37
13.3 Read input registers, 0x04	38
13.4 Write single register, 0x06	38
13.5 Write multiple registers, 0x10	38
13.6 Diagnostics, 0x08	39
13.7 Diagnostics register interpretation	39
13.8 Diagnostics: return query data	39
13.9 Reading the CIM configuration register block	40
13.10 Setting the setpoint	40
13.11 Setting the control mode	40
13.12 Starting the E-pump	41
13.13 Stopping the E-pump	41
14. Fault finding the product	42
14.1 CIM 200	42
14.2 CIM/CIU 260	44
14.3 CIM 500	46
15. Modbus RTU rotary switch addresses	48
16. Disposing of the product	49
17. Grundfos alarm and warning codes	50

1. General information



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.

**DANGER**

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.

**WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

**CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:

SIGNAL WORD**Description of the hazard**

Consequence of ignoring the warning

- Action to avoid the hazard.

1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

2. Introduction

2.1 About this functional profile

This functional profile describes the following modules and units:

- CIM/CIU 200 Modbus RTU
- CIM/CIU 260 Modbus 3G/4G cellular
- CIM/CIU 500 Ethernet for Modbus TCP.

This functional profile applies to the following Grundfos products:

- Grundfos CRE/CRNE/CRIE, MTRE, CHIE, CME
- Grundfos TPE, TPE Series 2000, NBE/NKE
- Grundfos CUE drive
- Grundfos MAGNA3

In the following, the supported products are referred to as "E pumps".

Grundfos cannot be held responsible for any problems caused directly or indirectly by using information in this functional profile.

2.2 Assumptions

This functional profile assumes that the reader is familiar with the commissioning and programming of Modbus devices. The reader should also have some basic knowledge of the Modbus protocol and technical specifications.

It is also assumed that an existing Modbus network with a Modbus master is present.

2.3 Definitions and abbreviations

3G	Third-generation mobile telephony network.
4G	Fourth-generation mobile telephony network.
ARP	Address Resolution Protocol. Translates IP addresses into MAC addresses.
Auto-MDIX	Ensures that both crossover cable types and non-crossover cable types can be used.
CAT5	Ethernet cable with four twisted pairs of wires.
CAT5e	Enhanced CAT5 cable with better performance.
CAT6	Ethernet cable compatible with CAT5 and CAT5e and with very high performance.
CIM	Communication Interface Module.
CIU	Communication Interface Unit.
CRC	Cyclic Redundancy Check. A data error detection method.
DHCP	Dynamic Host Configuration Protocol. Used to configure network devices so that they can communicate on an IP network.

DNS	Domain Name System. Used to resolve host names to IP addresses.
GENibus	Proprietary Grundfos fieldbus standard.
GENipro	Proprietary Grundfos fieldbus protocol.
Grundfos GO	A Grundfos application designed to control Grundfos products via infrared or radio communication. Available for iOS and Android devices.
H	Head (pressure).
HTTP	Hyper Text Transfer Protocol. The protocol commonly used to navigate the world wide web.
IANA	Internet Assigned Numbers Authority.
IP	Internet Protocol.
LED	Light-Emitting Diode
MAC	Media Access Control. Unique network address for a piece of hardware.
Modbus	A serial communications protocol commonly used in industry and building automation systems.
Modbus RTU	Modbus is a fieldbus used worldwide. The RTU version is used for wired networks and CIM 200.
Modbus TCP	Modbus is a fieldbus used worldwide. The TCP version is adapted for use as an application protocol on TCP/IP using either CIM 260 3G/4G cellular or CIM 500 Ethernet as basis.
PIN	Personal Identification Number. For SIM cards.
Ping	Packet InterNet Groper. A software utility that tests the connectivity between two TCP/IP hosts.
PUK	Personal Unblocking Key. For SIM cards.
Q	Flow rate.
SELV	Separated or Safety Extra-Low Voltage.
SIM	Subscriber Identity Module. SIM card.
SMA	SubMiniature version A. Coaxial radio signal cable connection standard.
SMTP	Simple Mail Transfer Protocol.
SNTP	Simple Network Time Protocol. Used for clock synchronisation between computer systems.
TCP	Transmission Control Protocol. Protocol for Internet communication and Industrial Ethernet communication.
TCP/IP	Transmission Control Protocol/Internet Protocol. Protocol for Internet communication.
Transmission speed	Bits transferred per second, bit/s.
URL	Uniform Resource Locator. The IP address used to connect to a server.
UTC	Coordinated Universal Time. The primary time standard by which the world regulates clocks and time.
UTF-8	Unicode Transformation Format. Character encoding.
VPN	Virtual Private Network. A network using the Internet to connect nodes. These systems use encryption and other security mechanisms to ensure that only authorised users can access the network and that the data cannot be intercepted.

3. System description

3.1 Modbus

The system diagrams provide an overview of the different technologies and how to connect the module or unit to the Grundfos E pump that you connect to a Modbus network.

CIM solution

The Communication Interface Module (CIM) is an add-on communication module you install internally in a Grundfos E-pump using a 10-pin connection. In this setup, the E-pump will supply power to CIM 200.

For mounting of the CIM add-on module, see the installation and operating instructions for the E-pump in question.

CIU solution

The Communication Interface Unit (CIU) is a box with a power supply module and a CIM Modbus module. You can mount either on a DIN rail or on a wall.

You use it in conjunction with Grundfos E-pumps that do not support an internal, add-on communication module, CIM.

Related information

3.2 CIM 200 Modbus RTU




Principle sketch of CIM 200 Modbus RTU solution with add-on CIM module installed inside the pump. The figure shows a MAGNA3 pump



Principle sketch of CIU 200 Modbus RTU solution. The figure shows a CUE-drive for pumps

The CIM module or the CIU unit is connected as a Modbus slave directly to the Modbus network.

3.3 CIM 260 3G/4G cellular Modbus

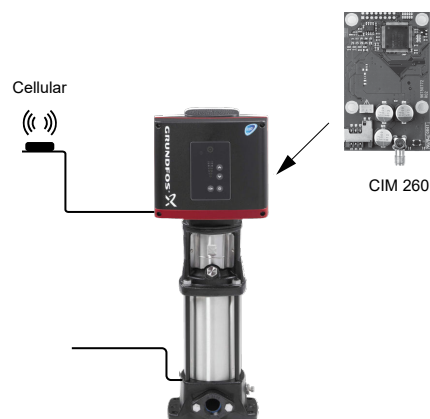


Principle sketch of CIM 260 Modbus cellular solution with internal add-on CIM module and external antenna. The figure shows a CRE pump




Principle sketch of CIU 260 Modbus cellular solution with external antenna. The figure shows a CUE-drive for pumps

3.4 CIM 500 Modbus TCP

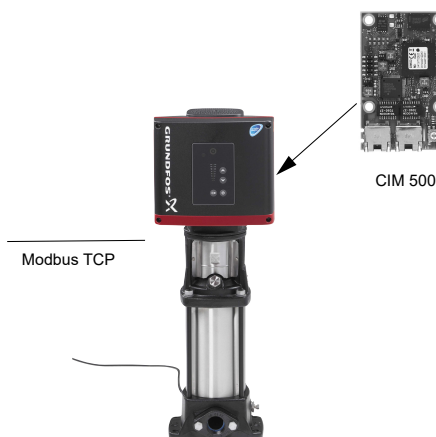

Principle sketch of CIM 500 Modbus TCP solution with internal add-on module. The figure shows a CRE pump

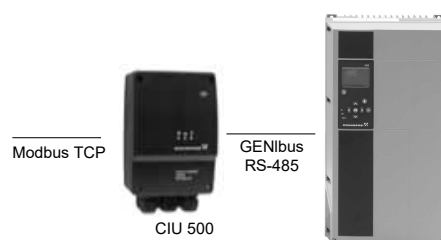

Principle sketch of CIU 500 Modbus TCP solution. The figure shows a CUE drive for pumps

4. Specifications

4.1 CIM module

General data	Description	Comments
Ambient humidity	30 % to 95 %	Relative, non-condensing.
Operating temperature	-20 to +45 °C	
Storage temperature	-25 to +70 °C	
Battery, lithium-ion	You can only charge the battery if the battery temperature is between 0 and 45 °C.	CIM 260 only.
GENIbus visual diagnostics	LED2	The LED will be in one of these states: Off, permanently green, flashing red, permanently red.
Power supply (CIU)	24-240 V	Located in the unit.
GENIbus connection type (CIU)	RS-485, 3-wire + screen	Conductors: A, B and Y.
CIU box enclosure class	IP54	
CIU box dimensions (H × W × D)	182 × 108 × 82 mm	

Related information

[5.5 Status LEDs](#)

4.2 CIM 200 Modbus RTU

The table below provides an overview of the specifications for Grundfos CIM 200 and CIU 200. For further details, refer to the specific sections of this functional profile.

Modbus RTU specifications	Description	Comments
Modbus connector	Screw-type terminal	3 pins.
Modbus connection type	RS-485, 2-wire + common	Conductors: D0, D1 and Common.
Maximum cable length	1200 m	Equals 4000 ft.
Slave address	1-247	Set via rotary switches SW6 and SW7.
Line termination	On or Off	Set via DIP switches SW1 and SW2.
Recommended cable cross-section	0.20 - 0.25 mm ²	AWG24 or AWG23
Supported transmission speeds	1200 ¹⁾ , 2400 ¹⁾ , 4800 ¹⁾ , 9600, 19200, 38400 bit/s	Set via DIP switches SW4 and SW5.
Start bit	1	Fixed value.
Data bits	8	Fixed value.
Stop bits	1 or 2	Set via DIP switch SW3.
Parity bit	Even parity, odd parity ¹⁾ or no parity	Set via DIP switch SW3.
Modbus visual diagnostics	LED1	Off, flashing green, flashing red, permanently red.
Maximum number of Modbus devices	32	Using repeaters, you can increase this number. Legal address range is 1-247.
Maximum Modbus telegram size	256 bytes	Total length. Node address and CRC included.

1) Can only be set via software.

Related information

[5. CIM 200 Modbus RTU setup](#)

[5.1 Setting the Modbus transmission speed](#)

[5.2 Setting the stop bits and the parity bit](#)

[5.3 Modbus address selection](#)

[5.4 Termination resistor](#)

[5.5 Status LEDs](#)

[13. Modbus RTU telegram examples](#)

4.3 CIM 260 3G/4G cellular

The table below provides an overview of the specifications for Grundfos CIM/CIU 260. For further details, refer to the specific sections of this functional profile.

Modbus cellular specifications	Description	Comments
Data protocol	Modbus TCP	Data connection uses Modbus TCP.
Slave address	Factory 231 (0xE7)	You can change the address via Modbus register 00003, SoftwareDefinedModbusAddress.
Cellular connection visual diagnostics	LED1	
Maximum Modbus telegram size	260 bytes	Total Modbus TCP/IP application data unit.

Related information

[6.2 Status LEDs](#)


[12.1.1 What is APN and Modbus TCP?](#)

4.4 CIM 500 Modbus TCP

The table below provides an overview of the specifications for Grundfos CIM/CIU 500 for Modbus TCP. For further details, refer to the specific sections of this functional profile.

Modbus TCP specifications	Description	Comments
Application layer	DHCP, HTTP, Ping, FTP, Modbus TCP	Rotary switch in position 1 to select Modbus TCP.
Transport layer	TCP	
Internet layer	Internet protocol V4 (IPv4)	
Link layer	ARP, media access control (Ethernet)	
Ethernet cable	CAT5, CAT5e or CAT6	Supports auto cable-crossover detecting (Auto-MDIX)
Maximum cable length	100 metres	Corresponds to 328 feet.
Transmission speed	10 Mbit/s, 100 Mbit/s	Auto-detected

5. CIM 200 Modbus RTU setup

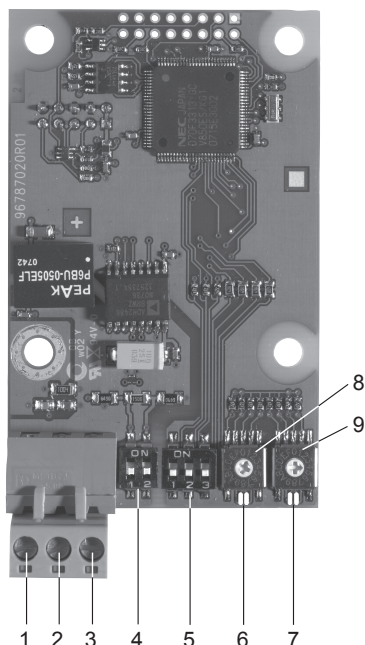

CIM 200 Modbus module

Pos.	Designation	Description
1	D1	Modbus terminal D1 (positive data signal)
2	D0	Modbus terminal D0 (negative data signal)
3	Common/GND	Modbus terminal Common and GND
4	SW1/SW2	On and off switches for termination resistor
5	SW3/SW4/SW5	Switches for selection of Modbus parity and transmission speed
6	LED1	Red and green status LED for Modbus communication
7	LED2	Red and green status LED for internal communication between CIM/CIU 200 and the E pump
8	SW6	Hexadecimal rotary switch for setting the Modbus address, four most significant bits
9	SW7	Hexadecimal rotary switch for setting the Modbus address, four least significant bits


Use a screened, twisted-pair cable. Connect the cable screen to protective earth at both ends.

Recommended connection

Modbus terminal	Colour code	Data signal
D1-TXD1	Yellow	Positive
D0-TXD0	Brown	Negative
Common/GND	Grey	Common/GND

5.1 Setting the Modbus transmission speed

Set the transmission speed correctly before the CIM 200 Modbus module is ready to communicate with the Modbus network. Use DIP switches SW4 and SW5 for setting the transmission speed.

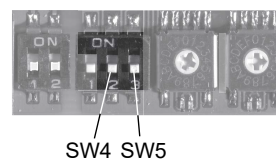

Modbus transmission speed

DIP switch settings

Available transmission speeds in bit/s: 1200, 2400, 4800, 9600, 19200 and 38400.

The first three transmission speeds are only available via software settings, whereas the last three are available via DIP switches.

Transmission speed [bit/s]	SW4	SW5
9600	OFF	ON
19200	OFF	OFF
38400	ON	OFF
Software-defined	ON	ON

Default transmission speed is 19200 bits per second, as per the Modbus RTU standard.

Software-defined

When SW4 and SW5 are set to "software-defined", writing a value to the holding register at address 00004 will set a new transmission speed.

Use the following values for software-defined transmission speeds:

Software-defined transmission speed	Value to set in register 00004
1200 bit/s	0
2400 bit/s	1
4800 bit/s	2
9600 bit/s	3
19200 bit/s	4
38400 bit/s	5

This value is set to 1200 bit/s as default.

The communication interface does not support transmission speeds above 38400 bit/s.

The software-defined transmission speed value is stored in the communication interface and remains after a power-off.



When software-defined has been selected, then the communication speed, parity bit, stop bits and address are all set via specific registers.

Related information

[5.2 Setting the stop bits and the parity bit](#)

[5.3 Modbus address selection](#)

5.2 Setting the stop bits and the parity bit



When software-defined transmission speed is enabled (SW4 and SW5 are ON), software-defined parity and stop bits are also enabled.


You can set the parity either manually by using SW3 or via software-defined settings.

Manual setting of parity

Default byte format (11 bits):

- 1 start bit
- 8 data bits (least significant bit sent first)
- 1 parity bit (even parity)
- 1 stop bit.

The default setting of the CIM 200 Modbus module is even parity (1 stop bit). It is possible to change the parity using DIP switch SW3. You can change the parity to no parity (2 stop bits).



SW3

TM041709

Parity

DIP switch settings

Parity	SW3
Even parity, 1 stop bit	OFF
No parity, 2 stop bits	ON

Software-defined parity and stop bits

When SW4 and SW5 are set to "software-defined", the value in the holding registers at addresses 00009 and 00010 will override the setting of SW3.

Software-defined parity	Value to set in register 00009
No parity [default]	0
Even parity	1
Odd parity	2

Software-defined stop bit	Value to set in register 00010
1 stop bit [default]	1
2 stop bits	2

The software-defined parity and stop bit values are stored in the communication interface and remain after a power-off.



For software-defined parity and stop bits to become active, you must set SW4 and SW5 to ON.


Related information

5.1 Setting the Modbus transmission speed

5.3 Modbus address selection

A Modbus slave on a Modbus network must have a unique address from 1-247. Address 0 is reserved for broadcasting, and is not a valid slave address.

To set the Modbus address, use two hexadecimal rotary switches (SW6 and SW7).



SW6 SW7

TM041706

Setting the Modbus address

For a complete overview of Modbus addresses, see section Modbus RTU rotary switch addresses.




When software-defined transmission speed is enabled, software-defined address is also enabled and you set the address via register 00003.

You must set the Modbus address decimally from 1 to 247.

5.4 Termination resistor

The termination resistor is fitted on CIM 200 Modbus and has an effective value of 120 Ω.

CIM 200 has a DIP switch with two switches, SW1 and SW2, for cutting the termination resistor in and out.



SW1 SW2

TM041701

Cutting the termination resistor in and out

DIP switch settings

Status	SW1	SW2
Cut in	ON	ON
	OFF	OFF
Cut out	ON	OFF
	OFF	ON

Default setting: Termination resistor cut out.

Cable length

We recommend the following maximum lengths:

Bit/s	Maximum cable length	
	Terminated cable [m/ft]	Unterminated cable [m/ft]
1200-9600	1200/4000	1200/4000
19200	1200/4000	500/1700
38400	1200/4000	250/800



To ensure a stable and reliable communication, it is important that only the termination resistor of the first and last units in the Modbus network are cut in.



All switch settings will be effective immediately after setting the values. No power-off is needed.

5.5 Status LEDs

The CIM 200 Modbus has two LEDs.

- Red and green status LED1 for Modbus communication
- Red and green status LED2 for internal communication between CIM 200 and the Grundfos product.

LED1

Status	Description
Off	No Modbus communication.
Flashing green	Modbus communication active.
Flashing red	Fault in the Modbus communication.
Permanently red	Fault in the CIM 200 Modbus configuration.

LED2

Status	Description
Off	CIM 200 has been switched off.
Flashing red	No internal communication between CIM 200 and the Grundfos product.
Permanently red	CIM 200 does not support the Grundfos product connected.
Permanently green	Internal communication between CIM 200 and the Grundfos product is OK.




During startup, there may be a delay of up to 5 seconds before the LED2 status is updated.

Related information

5. CIM 200 Modbus RTU setup

6. CIM 260 3G/4G cellular Modbus setup

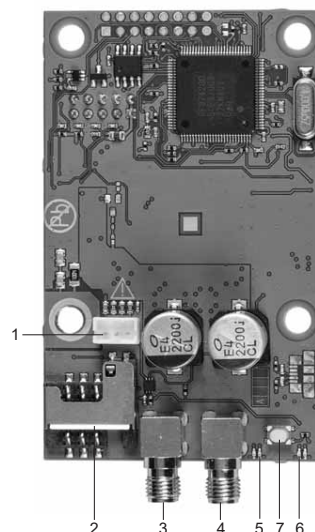

TM084023

CIM 260 cellular module (top-side view)

Pos.	Designation	Description
1		Battery socket
2		SIM card holder
3		Secondary SMA connection for cellular antenna ²⁾ .
4		Primary SMA connection for cellular antenna. This antenna must always be connected.
5	LED1	Yellow and green status LED for cellular communication.
6	LED2	Red and green status LED for internal communication between CIM 260 and the Grundfos product.
7	SW1	To reset to factory settings, press and hold for at least 5 seconds.

²⁾ Use this antenna connection only if required by the telecom company.

6.1 Installation

WARNING

Electric shock

Death or serious personal injury



- Before installation, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

6.1.1 Fitting a cellular antenna

Connect an antenna to CIM 260 to establish connection to the cellular network.




If CIU 260 is installed in a metal control cabinet, we recommend fitting an external antenna.

Grundfos offers different kinds of antennas. No antenna is supplied with CIU 260. You can order it separately.

External antenna

Connect the antenna cable to the SMA connection (pos. 1) of CIM 260. The antenna must be installed outside the control cabinet in a position with good reception conditions. If required by the telecom company, connect an additional antenna.

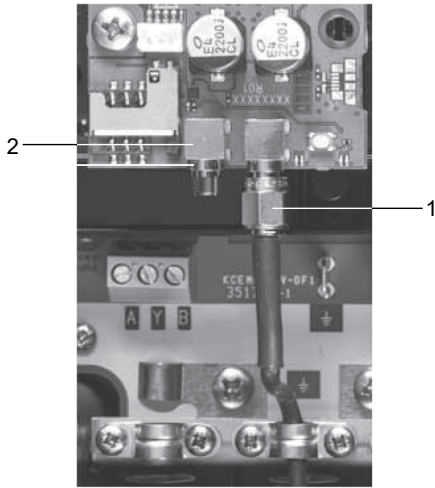

TM084024

Fitting an external cellular antenna

Pos.	Description
1	Primary SMA connection for the cellular antenna. This antenna must always be connected
2	Secondary SMA connection for the cellular antenna ³⁾ .

³⁾ Use this antenna connection only if required by the telecom company.

6.1.2 Inserting the SIM card

Before inserting the SIM card into CIM 260, remove the PIN code, or set the PIN code to "4321".


Procedure

1. Insert the SIM card into a mobile phone.
2. Remove the PIN code from the SIM card, or set the PIN code to "4321". See the manual of the mobile phone.
3. Insert the SIM card into CIM 260.



The slanted edge of the SIM card must point downwards, away from the connector.

The connectors on the SIM card must face inwards towards CIM 260.

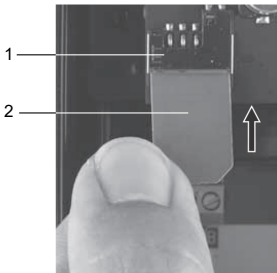

TM084025

Inserting the SIM card

Pos.	Description
1	SIM card holder
2	SIM card

6.1.3 Connecting the battery and power supply

WARNING

Flammable material

Death or serious personal injury




- The safety precautions listed below must be observed carefully as improper handling of the lithium-ion battery may result in injury or damage from electrolyte leakage, heating ignition or explosion.

- Only insert the approved Grundfos battery pack (order no. 99499908).
- Never use this battery pack in other battery chargers.
- Do not dismantle or modify the battery.
- Do not heat or incinerate the battery.
- Do not pierce, crush or cause mechanical damage to the battery.
- Do not short-circuit the battery.
- Do not allow the battery to get wet or be immersed in water.
- Do not strike or throw the battery.
- For long periods of storage, the temperature must be below 35 °C.

You can fit CIM 260 with a lithium-ion battery (order no. 99499908), which will ensure sustained cellular connection with the product in which it is mounted, even if the power is switched off. The battery is secured by a velcro strap which absorbs vibrations and simplifies replacement.



If a battery is not connected, the user will not receive any information in case of a power cut.

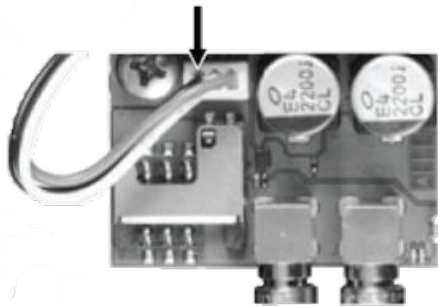

TM080060

Connecting the battery



You can only charge the battery if the battery temperature is within 0 to 45 °C.

Switch on the power supply. CIM 260 is powered either by the Grundfos product or by the battery.

LED1 flashes yellow, searching for a cellular network. When the connection to the cellular network has been established, LED1 pulsates yellow, the cellular network is active.

LED2 is permanently green, indicating that you have fitted CIM 260 correctly in the Grundfos product.

6.1.4 Configuration


For software configuration of CIM 260, which includes setting of SMS functions and SCADA communication parameters, see "CIM 260 SMS commands", which you can download from Grundfos Product Center.

6.2 Status LEDs

The CIM 260 module has two LEDs.

- Yellow and green status LED1 for cellular communication.
- Red and green status LED2 for internal communication between CIM 260 and the Grundfos product.

LED1, yellow and green

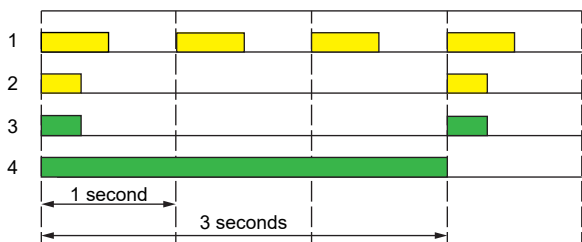

LED1 status

Pos.	Status	Description
1	Flashing yellow	Searching for cellular network.
2	Pulsating yellow, single pulse	Connection to the cellular network has been established.
3	Pulsating green, single pulse	Communication via data connection.
4	Green, 3 seconds	Sending or receiving an SMS message.

LED2, red and green

Status	Description
Off	CIM 260 has been switched off.
Flashing red	No communication between CIM 260 and the Grundfos product.
Permanently red	CIM 260 does not support the connected version of the Grundfos product.
Permanently green	The connection between CIM 260 and the Grundfos product is OK.

7. CIM 500 Modbus TCP setup



WARNING

Electric shock

Death or serious personal injury

- Connect CIM 500 only to SELV circuits.


7.1 Connecting the Ethernet cable

Use RJ45 plugs and Ethernet cable. Connect the cable shield to protective earth at both ends.




It is important to connect the cable shield to earth through an earth clamp or to connect the cable shield to earth in the connector.

CIM 500 is designed for flexible network installation; the built-in two port switch makes it possible to daisy chain from product to product without the need for additional Ethernet switches. The last product in the chain is only connected to one of the Ethernet ports. Each Ethernet port has its own MAC address.

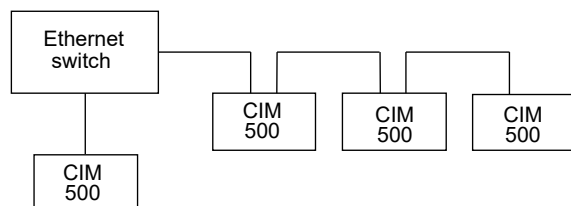

Example of Industrial Ethernet network

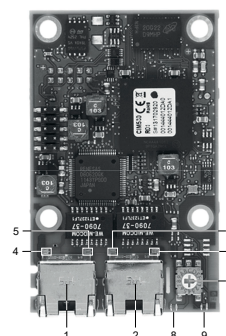

Example of Ethernet connection

Pos.	Description	Designation
1	Industrial Ethernet RJ45 connector 1	ETH1
2	Industrial Ethernet RJ45 connector 2	ETH2
3	Rotary switch for protocol selection	SW1
4	Data activity LED for connector 1	DATA1
5	Link LED for connector 1	LINK1
6	Data activity LED for connector 2	DATA2
7	Link LED for connector 2	LINK2
8	Green and red status LED for Ethernet communication	LED1
9	Green and red status LED for internal communication between the module and the product.	LED2

7.2 Setting the Industrial Ethernet protocol

The CIM 500 Ethernet module has a rotary switch for selection of the Industrial Ethernet protocol.



TM079843

Selecting the Industrial Ethernet protocol

Pos.	Description
0	PROFINET IO (default)
1	Modbus TCP
2	BACnet IP
3	EtherNet/IP
4-E	Reserved, LED1 will be permanently red to indicate an invalid configuration.
F	Reset to default setting Note: The rotary switch must be set in this position for 20 seconds to reset to default setting. During this period LED1 flashes red and green at the same time to indicate that a reset will occur.



Every change of the rotary-switch setting while the module is powered on will cause the module to restart.

7.3 Setting the IP addresses

The CIM 500 Ethernet module is by default set to a fixed IP address. You can change the IP address settings from the built-in webserver.

Default IP settings used by the webserver	IP address: 192.168.1.100 Subnet mask: 255.255.255.0 Gateway: 192.168.1.1
IP settings for Modbus TCP	Make the settings via the webserver.

7.4 Establish a connection to the webserver

You can configure CIM 500 using the built-in webserver. To establish a connection from a PC to CIM 500, the following steps are required:

- Connect the PC and CIM 500 using an Ethernet cable.
- Configure the PC Ethernet port to the same subnetwork as CIM 500, for example 192.168.1.101, and the subnet mask to 255.255.255.0.
- Open a standard internet browser and type 192.168.1.100 in the URL field.
- Log in to the webserver using the following:

User name	Default: admin
Password	Default: Grundfos



User name and password may have been changed from their default values. If the password hasn't been changed, you will be prompted to change it to a new and stronger password.



TM056436

CIM 500 connected to a PC via Ethernet cable



You can use both ETH1 and ETH2 to establish a connection to the webserver.



You can access the webserver while the selected Industrial Ethernet protocol is active.

Related information

[A.1. Webserver configuration](#)

7.5 Status LEDs

The CIM 500 Ethernet module has two status LEDs: LED1 and LED2.

- Red and green status LED1 for Ethernet communication
- Red and green status LED2 for internal communication between CIM 500 and the Grundfos product.

LED1

Status	Description
Off	No Modbus TCP communication or switched off.
Flashing green	Modbus TCP communication active.
Permanently red	CIM 500 module configuration fault.
Permanently red and green	Error in the firmware download.
Flashing red and green	Resetting to factory default. After 20 seconds, CIM 500 restarts.

LED2

Status	Description
Off	CIM 500 is switched off.
Flashing red	No internal communication between CIM 500 and the Grundfos product.
Permanently red	CIM 500 does not support the Grundfos product connected.
Permanently green	Internal communication between CIM 500 and the Grundfos product is OK.
Permanently red and green	Memory fault.



During startup, there is a delay of up to 5 seconds before LED1 and LED2 status is updated.

Related information

[7.1 Connecting the Ethernet cable](#)

[14.3.1 LED status](#)

7.6 DATA and LINK LEDs

The CIM 500 Ethernet module has two connectivity LEDs related to each RJ45 connector.

DATA1 and DATA2

These yellow LEDs indicate data traffic activity.

Status	Description
Yellow off	No data communication on the RJ45 connector.
Yellow flashing	Data communication ongoing on the RJ45 connector.
Permanently yellow	Heavy network traffic on the RJ45 connector.

LNK1 and LNK2

These green LEDs show whether the Ethernet cable is properly connected.

Status	Description
Green off	No Ethernet link on the RJ45 connector.
Green on	Ethernet link on the RJ45 connector is OK.

Related information

[7.1 Connecting the Ethernet cable](#)

8. Modbus function code overview

The supported function codes are shown in the table below:

Type	Code	Hex	Name
16-bit data (registers)	03	0x03	Read holding registers
	04	0x04	Read input registers
	06	0x06	Write single register
	16	0x10	Write multiple registers
Diagnostics	08	08	Diagnostics



Reading or writing coils are not supported.

The same data are available in both holding registers and input registers, meaning that either function (0x03 or 0x04) can be used for reading data.



Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Related information

[13.6 Diagnostics, 0x08](#)

9. Modbus register addresses

9.1 Register block overview

The Modbus RTU registers are grouped in the following register blocks:

Start address	Register block	Permissions	Description
00001	CIM configuration	R/W	Configuration of the CIM module.
00021	CIM status	R	Status registers for the CIM module.
00101	Pump control	R/W	Registers for control of the E-pump.
00201	Pump status	R	Registers for reading mode status from the E-pump.
00301	Pump data	R	Registers for reading measured data values from the E-pump.
00701	Alarm simulation	R/W	Registers for simulating alarms and warnings in the E-pump.
00751-800	User registers	R/W	Registers where the user can freely store data.

All addresses contain 16 bit registers. Some registers are bit-interpreted, consisting of one or more parameters of type bool, while others are 16-bit values or high/low order parts of 32 bit values. When a 32 bit value is split in two 16 bit registers, the names will be labeled HI and LO at the end of the register name. Re-combining into a 32 bit value is done like this:

Parameter32bit = Parameter16bitHI x 65536 + Parmeter16bitLO

9.2 CIM configuration register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They can be written as holding registers with function codes 0x06 and 0x10.

Address	Register name	Description	CIM 200	CIM 260	CIM 500
00001	SlaveMinimumReplyDelay	The minimum reply delay from the slave in ms. Value range: 0-10000, i.e. up to 10 seconds reply delay. This delay is typically used in conjunction with a radio modem. The delay value is stored in the device and remains after a power-off. The delay set here is added to the internal delay in the device. Default value is 0.	•	-	-
00002		RESERVED			
00003	SoftwareDefinedModbusAddress	This register holds the active Modbus address. The default value is 0xE7 (231), and there is normally no need to change this value. Note that for CIM 200, this value is used only when you have set the transmission speed to "Software-defined" on DIP switches SW4 and SW5. Otherwise, CIM 200 ignores it.	•	•	-
00004	SoftwareDefinedBitRate	Modbus software-defined transmission speed enumeration. The software-defined transmission speed value is stored in the device and remains after a power-off. 0: 1200 bit/s 1: 2400 bit/s 2: 4800 bit/s 3: 9600 bit/s 4: 19200 bit/s 5: 38400 bit/s. Note that this value is used only when you have set the transmission speed to "Software-defined" on DIP switches SW4 and SW5. Otherwise, CIM 200 ignores it.	•	-	-
00005	AutoAckControlBits	Used to select the behaviour of control bit acknowledgements from the CIM/CIU. 0: Disabled. Control bits are not automatically lowered when accepted by the device. The user must lower the triggered control bit manually before the control bit can be triggered again. 1: Enabled. Control bits are automatically lowered when accepted by the device. The user does not have to lower it manually (default).	•	•	•
00006		RESERVED			
00007		RESERVED			
00008	NoDataActivityTimeout	The elapsed time with no data activity before the module issues a restart of the APN connection.	-	•	-
00009	SoftwareDefinedParity	Parity setting when using "software-defined" settings. 0: No parity (default) 1: Even parity 2: Odd parity. Note that for CIM 200, this value is used only when you set the transmission speed to "Software-defined" on DIP switches SW4 and SW5. Otherwise, CIM 200 ignores it.	•	-	-

Address	Register name	Description	CIM 200	CIM 260	CIM 500
00010	SoftwareDefinedStopBit	<p>Stop bit setting when using "software-defined" settings.</p> <p>0: No stop bit</p> <p>1: 1 stop bit (default)</p> <p>2: 2 stop bits.</p> <p>Note that for CIM 200, this value is used only when you set the transmission speed to "Software-defined" on DIP switches SW4 and SW5. Otherwise, CIM 200 ignores it.</p>	•	-	-
00011	ScadaPinCode	<p>PIN code for SCADA systems, etc.</p> <p>If GeneralStatus.ScadaPinCodeEnabled (register 00029, bit 0) is enabled, enter the correct PIN code in this register in order to gain access to remote control and configuration.</p> <p>Verify acceptance in GeneralStatus.WriteAccess (register 00029, bit 1).</p> <p>You programme the SCADA PIN code via the SMS command "SETSCADACODE". See "CIM 260 SMS commands", which you can download from Grundfos Product Center.</p>	-	•	-
00012	Watchdog	<p>Configuration of watchdog timeout.</p> <p>[5; 3600 s], default: Disabled='0'. Minimum value 5 s</p> <ul style="list-style-type: none"> • Watchdog is fed whenever the device is addressed by a valid telegram. • An interruption of telegrams for more than the timeout time activates the watchdog. • Action: The booster will be set to Local mode. • Values 1-4 set timeout to 5 s. Values >3600 set timeout value to 3600 s. 	•	-	•
00013	GENIbusDiodeOff	<p>For disabling the GENIbus LED2.</p> <p>0: GENIbus diode LED2 has normal function.</p> <p>1: GENIbus diode LED2 is permanently switched off.</p>	•	•	•

9.3 CIM status register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They are read-only. Use this block for various kinds of fault finding.

Address	Register name	Description	CIM 200	CIM 260	CIM 500
00021	GENIbusCRCErrorCnt	Holds a CRC error counter for the GENIbus connection to the E-pump.	•	•	•
00022	GENIbusDataErrorCnt	Holds a data error counter for the GENIbus connection to the E-pump.	•	•	•
00023	VersionNumber	A Grundfos-specific version number. BCD coded unsigned integer value.	•	•	•
00024	ActualModbusAddress	Holds the current Modbus slave address of the device. Valid value range: 1-247.	•	•	•
00025	GENIbusTXcountHI	Holds a transmit counter for the total number of telegrams sent to the E pump on the GENIbus connection.	•	•	•
00026	GENIbusTXcountLO				
00027	GENIbusRXcountHI	Holds a receive counter for the total number of telegrams received from the E-pump on the GENIbus connection.	•	•	•
00028	GENIbusRXcountLO				
00029	GeneralStatus Bit 0: ScadaPinCodeEnabled	PIN code functionality. 0: No PIN code required. 1: PIN code required to perform remote control and configuration. Activation of SCADA PIN-code protection takes place via the SMS command "SCADACODE". See "CIM 260 SMS commands", which you can download from Grundfos Product Center.	-	•	-
	GeneralStatus Bit 1: WriteAccess	Remote write access. 0: No write access (the PIN code is incorrect) 1: Full write access (the PIN code is either correct or not enabled).			
	GeneralStatus Bit 2: LoginBlocked	Login blocked due to too many login attempts.			
		UnitFamily	UnitType		
00030	UnitFamily	1 Circulator pumps	5 UPE, 3 phase	•	•
00031	UnitType		7 Magna, 1 phase	•	•
00032	UnitVersion		9 Magna, 1 phase, small	•	•
			10 MAGNA3		
		2 E-pump	2 MGE, 1 phase, model C or earlier		
			3 MGE, 3 phase, model D		
			4 MGE, 3 phase, large (> 7.5 kW), model F		
			5 CUE frequency drive		
			6 MGE, 3 phase, model G		
			7 MGE model H/I/J		
			8 CUE II frequency drive		
			9 MGE model K		
		7 Motor Protector	1 MP 204		
		17 Hydro Multi-E	1 Multi-E with 1 phase MGE model G		
			2 Multi-E with 3 phase MGE model G		
		21 Hydro/Control MPC	1 CU 351/352 MPC		
			2 CU 323, Multi-B		
			3 CU 354, DDD		
			4 CU xxx MPC II		
		26 Dedicated Controls	1 CU 361/362		
		28 CIU xx2 SEG AutoAdapt	1 1 CIU xx2 SEG AutoAdapt wastewater		
		30 Smart Digital Dosing, DDA	1 Small DDA dosing pump		
			3 DDA XL dosing pump		
			4 DDA II dosing pump		
		38 Circulator twin pump	10 MAGNA3-D		
		39 Multi pump	7 Multi-E or TPED with MGE model H/I/J		
			9 Multi-E or TPED with MGE model K		
		46 LC Controller, water supply	1 LC 242, modular type		
			2 LC 232, wall mounted type		
		48 LC Controller, waste water	1 LC 241, modular type		
			2 LC 231, wall mounted type		
		65 SQ Controller	1 Pressure control		
			2 Solar application		

Address	Register name	Description	CIM 200	CIM 260	CIM 500
00033	BatteryState	State of CIM 260 module battery 0: Battery not present 1: Battery must be replaced 2: Battery charging 3: Battery needs charging, but temperature too high 4: Battery needs charging, but temperature too low 5: Battery low 6: Battery OK 255: Battery state not available	-	•	-
00034	ProductSoftwareVersionHI	Product software version (BCD digit 1-4 aa.bb)	•	•	•
00035	ProductSoftwareVersionLO	Product software version (BCD digit 5-8 cc.dd)	•	•	•
00036	ProductSoftwareDayMonth	Product software date (BCD ddmm)	•	•	•
00037	ProductSoftwareYear	Product software date (BCD yyyy)	•	•	•

9.4 Cellular network Real Time Clock

Address	Register name	Description	CIM 200	CIM 260	CIM 500
00080	SetUNIXRealTimeClockHI	Set real time clock (32 bit UNIX format)	-	•	-
00081	SetUNIXRealTimeClockLO	Triggered on value change	-	•	-
00082	SetRtcSecond	Set real time clock - seconds	-	•	-
00083	SetRtcMinute	Set real time clock - minutes	-	•	-
00084	SetRtcHour	Set real time clock - hours	-	•	-
00085	SetRtcDay	Set real time clock - day	-	•	-
00086	SetRtcMonth	Set real time clock - month	-	•	-
00087	SetRtcYear	Set real time clock - year	-	•	-
00088	Bit 0: SetRtc	Triggers setting of real time clock - s/m/h/d/m/y format	-	•	-
00089	StatusUNIXRealTimeClockHI	Real time clock (32 bit UNIX format)	-	•	-
00090	StatusUNIXRealTimeClockLO		-	•	-
00091	StatusRtcSecond	Real time clock - seconds	-	•	-
00092	StatusRtcMinute	Real time clock - minutes	-	•	-
00093	StatusRtcHour	Real time clock - hours	-	•	-
00094	StatusRtcDay	Real time clock - day of month	-	•	-
00095	StatusRtcMonth	Real time clock - month	-	•	-
00096	StatusRtcYear	Real time clock - year (after 2000)	-	•	-
00097	Bit 0: StatusSetRTCAck	Acknowledge of set RTC command	-	•	-

9.5 Pump control register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They can be written as holding registers with function codes 0x06 and 0x10.

Address	Register name	Description
00101	Bit 0: RemoteAccessReq	Control bit that sets local or remote control. 0: Local 1: Remote (controlled by Modbus master). Set this bit to 1 if a Modbus master should control the E-pump. You can read the actual status from register 00201 bit 8.
	Bit 1: OnOffReq	Control bit that switches the E-pump on or off. 0: Off (stop) 1: On (start). You can read the actual status from register 00201 bit 9.
	Bit 2: ResetAlarm	Control bit that resets alarms and warnings from the E-pump. 0: No resetting 1: Resetting alarm. This control bit is triggered on rising edge only, i.e. setting logical 0 to 1. See section CIM configuration register block , address 00005, for acknowledgement behaviour.
	Bit 4: CopyToLocal	Control bit that enables copying of remote settings to local pump settings. Only available on MAGNA3, CUE and MGE model H and later. 0: Disabled 1: Enabled. You can read the actual status from register 00201 bit 1. Note that copy of the Control Context, which is Control mode, Operating mode, On/off and Setpoint, from the remote setting to the local setting takes place when CopyToLocal has been enabled, but only during a Remote->Local transition. It is necessary to introduce such a transition whenever the user wants the local setting to be updated and stored in the EEPROM.
	Bit 5: EnableMaxFlowLimit	Control bit that enables or disables the FLOWLIMIT function. Set the maximum flow limit value in register 00106. Only available on MAGNA3 and MGE model H and later. 0: Disabled (only used in control mode FLOWADAPT) 1: Enabled (used in all control modes). You can read the actual status from register 00201 bit 2.
	Bits 6-15: RESERVED	-
00102	ControlMode	Sets the control mode enumeration. Some modes are not supported by all E-pumps. 0: Constant speed 1: Constant frequency 3: Constant head 4: Constant pressure 5: Constant differential pressure 6: Proportional pressure 7: Constant flow 8: Constant temperature 9: Constant differential temperature 10: Constant level 128: AUTOADAPT 129: FLOWADAPT (set FLOWLIMIT in register 00106) 130: Closed-loop sensor. 131: AUTOADAPT(CP) You can read the actual control mode from register 00203.
00103	OperationMode	A state enumeration to control the E-pump operating mode. 0: Auto-control (setpoint control according to selected control mode) 4: OpenLoopMin (running at minimum speed) 6: OpenLoopMax (running at maximum speed). Note that "OnOffReq" has higher priority than "OperationMode", meaning that you must set "OnOffReq" to "On" for "OperationMode" to have any effect. You can read the actual operation mode from register 00204.
00104	Setpoint	Sets the E-pump setpoint. The scale is 0.01 %, so the value must be from 0 to 10000 to represent the entire 0-100 % range. Closed loop: Percentage of setpoint range. Open loop Percentage of nominal frequency. Common examples 4700: 47 % 8000: 80 %. You can read the actual setpoint from register 00338 UserSetpoint

Address	Register name	Description
00105	RelayControl	A register to control the relays. It is bitwise interpreted as follows:
	Bit 0: Relay1Control	Controls the state of relay 1. 0: Closed 1: Open Only E-pumps and CUE.
	Bit 1: Relay2Control	Controls the state of relay 2. 0: Closed 1: Open Only CUE, large MGE, MGE model H and later.
	Bits 2: Relay3Control	Controls the state of relay 3. 0: Closed 1: Open Only MGE model H and later.
	Bits 3: Relay4Control	Controls the state of relay 4. 0: Closed 1: Open Only MGE model H and later.
	Bits 4-15: RESERVED	-
00106	SetMaxFlowLimit	Sets the maximum flow limit, FLOWLIMIT. It must be enabled in register 00101, bit 5. The value is set in 0.01 m ³ /h. If enabled, the FLOWLIMIT is active in all control modes. If disabled, the maximum flow limit will only be active in FLOWADAPT control mode. Read actual value in register 00345 Only available on MAGNA3 and MGE model H and later.
00107	SetPumpUnixRtcHI	Sets the real-time clock in the pump in unix format (seconds since 01-01-1970).
00108	SetPumpUnixRtcLO	Only available on MAGNA3 and MGE model H and later.
00109	SensorFeedback	Closed loop sensor feedback via Modbus, scaling 0.01 %
00110	SetKp	Sets the proportional gain, Kp. The scale is 0.1. Only available on MAGNA3 and MGE model H and later.
00111	SetTi	Sets the integral action time, Ti. The scale is 0.1 s. Only available on MAGNA3 and MGE model H and later.
00112	SetDirectCtr	Selection of Direct/Inverse control. 0: Inverse control 1: Direct control Only available on MAGNA3 and MGE model H and later.

Related information

[9.2 CIM configuration register block](#)

[10.1 Control mode](#)

[10.2 Setpoint in closed-loop control](#)

9.6 Pump status register block

Registers in this register block can be read by means of function codes 0x03 and/or 0x04. They are read-only.

Address	Register name	Description
00201	Bits 0: LowFlowStop	Indicates if the state of "Low Flow Stop" function is active or not active. 0: Pump is not in "Low Flow Stop" state 1: Pump is in "Low Flow Stop" state Only available on MGE model H and later.
	Bit 1: CopyToLocal	Indicates if the remote settings of setpoint, operating mode, control mode and on/off state will be automatically copied to local settings. 0: Copying disabled 1: Copying enabled. Only available on MAGNA3 and MGE model H and later.
	Bit 2: MaxFlowLimitEnabled	Indicates if the MaxFlowLimit is enabled. Enable it with register 00101, bit 5. Only available on MAGNA3 and MGE model H and later. 0: Disabled 1: Enabled.
	Bit 3: ResetAlarmAck	Indicates if a ResetAlarm command was acknowledged by the device. This bit will be set when the CIU has accepted a ResetAlarm command, and the programmer can clear the ResetAlarm bit. The ResetAlarmAck bit will automatically be cleared to 0 by the CIU when the ResetAlarm bit is cleared by the master device, and a new ResetAlarm command can be attempted by raising ResetAlarm bit again. 0: No acknowledgement 1: Command acknowledged. This functionality is only used when AutoAcknowledgeEvents is disabled.
	Bit 4: SetpointInfluence	Indicates if setpoint influence is active. 0: Not active 1: Active. Only available on MAGNA3 and MGE model H and later.
	Bit 5: AtMaxPower	Indicates if the E-pump is running at its power limit. Only available on MAGNA3 and MGE model H and later. 0: Not running at power limit 1: Running at power limit.
	Bit 6: Rotation	Indicates if the E-pump is rotating, that is running, or not. 0: No rotation 1: Rotation.
	Bit 7: Direction	Indicates the current rotational direction of the E-pump as seen from the ventilator side. 0: Clockwise. 1: Counterclockwise.
	Bit 8: AccessMode	Indicates if the E-pump is locally or remotely controlled. 0: Local (a local control source with higher priority controls the E-pump) 1: Remote (controlled by Modbus master).
	Bit 9: OnOff	Indicates if the E-pump is on or off. 0: Off (stopped, the green LED on the E-pump flashes) 1: On (started, the green LED on the E-pump is on). Started does not necessarily indicate rotation, for instance in case of low-flow stop.
	Bit 10: Alarm	Indicates if there is an alarm or not. 0: No alarm 1: Alarm (red LED on the E-pump is on).
	Bit 11: Warning	Indicates if there is a warning or not. The E-pump will continue running even if there is a warning. 0: No warning 1: Warning (red LED on the E-pump is on).
	Bit 12: ForcedToLocal	State of the "Forced to local" control option 0: Not forced to local 1: Forced to local. Only available on MAGNA3 and MGE model H and later.
	Bit 13: AtMaxSpeed	Indicates if the E-pump is running at maximum speed. 0: No 1: Yes.
	Bit 14: RESERVED	-
	Bit 15: AtMinSpeed	Indicates if the E-pump is running at minimum speed. 0: No 1: Yes.

Address	Register name	Description
00202	ProcessFeedback	<p>Indicates the actual process feedback from the E-pump. The scale is 0.01 %, so the valid value range is from 0 to 10000. This value can be compared with the setpoint value. Closed loop: Percentage of closed-loop feedback sensor range. Open loop Percentage of E-pump performance. Common examples 4700: 47 % 8000: 80 %.</p>
00203	ControlMode	<p>Indicates the actual control mode. Not all modes are supported by all E-pump types. 0: Constant speed 1: Constant frequency 3: Constant head 4: Constant pressure 5: Constant differential pressure 6: Proportional pressure 7: Constant flow 8: Constant temperature 9: Constant differential temperature 10: Constant level 128: AUTOADAPT 129: FLOWADAPT 130: Closed-loop sensor. 131: AUTOADAPTCP</p>
00204	OperationMode	<p>Indicates the actual operating mode. 0: Auto-control (Normal, setpoint control according to selected control mode) 4: OpenLoopMin (running at minimum speed) 6: OpenLoopMax (running at maximum speed). 7: Hand mode</p>
00205	AlarmCode	The Grundfos-specific alarm code.
00206	WarningCode	The Grundfos-specific warning code.
00207	Bits 0-7: MonthsToBearingService	<p>Indicates the number of months until the next bearing service (not available on all E-pumps). This value can be 0, 1, 3, 6, 12 and 24 months, if available. A value of 24 months means "24 months or more". A value of 0xFF indicates that the information is not available.</p>
	Bit 8: BearingServiceType	<p>Indicates the type of the next bearing service (not available on all E-pumps). 0: Lubricate bearings 1: Change bearings.</p>
	Bits 9-15: RESERVED	-
00208	DriveState	<p>Dynamic drive state variable: 0: Stopped 1: Accelerating 2: Decelerating 3: Steady state/closed loop 4: - 5: Accelerating halt 6: Decelerating halt 7: Start on the run (flying cut-in) Only MGE motors and CUE drives.</p>
00209	FeedbackSensorUnit	<p>Indicates the unit of the feedback sensor. 0: bar 1: mbar 2: m 3: kPa 4: psi 5: ft 6: m³/h 7: m³/s 8: l/s 9: gpm 10: °C 11: °F 12: % 13: K 14: W.</p>
00210	FeedbackSensorMin	Minimum value of the feedback sensor. Unit of the sensor minimum is defined by register 00209.
00211	FeedbackSensorMax	Maximum value of the feedback sensor. Unit of the sensor maximum is defined by register 00209.
00212	NomFrequency	<p>Nominal pump frequency. The scale is 0.1 Hz. Only available on MAGNA3 and MGE model H and later.</p>

Address	Register name	Description
00213	MinFrequency	Minimum pump frequency in % of nominal frequency. The scale is 0.01 %. Only available on MAGNA3 and MGE model H and later.
00214	MaxFrequency	Maximum pump frequency in % of nominal frequency. The scale is 0.01 %. Only available on MAGNA3 and MGE model H and later.
00215	SetpointRangeMin	Minimum value of setpoint range in % of sensor maximum value. The scale is 0.01 %. Only available on MAGNA3 and MGE model H and later.
00216	SetpointRangeMax	Maximum value of setpoint range in % of sensor maximum value. The scale is 0.01 %. Only available on MAGNA3 and MGE model H and later.
00217	RESERVED	-
00218	RESERVED	-
00219	RESERVED	-
00220	RESERVED	-
00221	FlowEstimationState	State of the flow estimation algorithm 0: Flow estimation within range 1: Flow estimation below range 2: Flow estimation above range
00222	Kp	Actual proportional gain. The scale is 0.1. Only available on MAGNA3 and MGE model H and later.
00223	Ti	Actual integral action time. The scale is 0.1 s. Only available on MAGNA3 and MGE model H and later.
00224	DirectControl	Actual selection between Direct/Inverse control. 0: Inverse control 1: Direct control Only available on MAGNA3 and MGE model H and later.

Related information

[9.2 CIM configuration register block](#)

[17. Grundfos alarm and warning codes](#)

9.7 Pump data register block

Registers in this block can be read by means of function codes 0x03 and/or 0x04. They are read-only. The table below shows which registers each E-pump type supports.



Unless otherwise stated, the data type used for counters and scaled values is always an unsigned integer.

Table legend

3-ph:	3-phase only.
CUE:	CUE drive only.
MGE:	Pumps with MGE motor only.
G:	Only available on model G and later versions.
H:	Only available on model H and later versions.
S:	Sensor required.
•:	Always available.
*:	If the E-pump is a TPE Series 2000, the value is estimated and always available.

Address	Register name	Description	Scale	0.25 - 7.5 kW	11-22 kW + CUE	MAGNA3
00301	Head	Actual system head/pressure.	0.001 bar	S	S	•
00302	VolumeFlow	Actual system flow.	0.1 m ³ /h	S*	S*	•
00303	RelativePerformance	Performance relative to maximum performance.	0.01 %	•	•	•
00304	Speed	Motor speed.	1 rpm	•	•	•
00305	Frequency	Actual control signal applied to motor.	0.1 Hz	•	•	•
00306	DigitalInput	Logical value of external digital input signals.	bits	DI 1-4	DI 1-4	DI 1-3
00307	DigitalOutput	Logical value of external digital output signals.	bits	DO 1-4	DO 1-2	DO 1-2
00308	ActualSetpoint	Actual setpoint: Open loop: % of nominal frequency. Closed loop: % of sensor maximum.	0.01 %	•	•	•
00309	MotorCurrent	Actual motor current.	0.1 A	•	•	•
00310	DCLinkVoltage	Frequency converter DC-Link voltage.	0.1 V	•	•	•
00311	MotorVoltage	Motor voltage.	0.1 V	Model G only	•	-
00312	PowerHI	Total power consumption of the system.	1 W	•	•	•
00313	PowerLO					
00314	RemoteFlow	Measured flow at external sensor.	0.1 m ³ /h	G + S	S	-
00315	InletPressure	System inlet pressure, relative to atmospheric pressure. It has an offset of -1.000 bar.	0.001 bar	G + S	S	-
00316	RemotePressure1	Measured pressure at external sensor, relative to atmospheric pressure.	0.001 bar	G + S	S	S
00317	FeedTankLevel	Feed tank level. Offset -100m.	0.01 m	S	S	-
00318	PowerElectronicTemp	Temperature in frequency converter.	0.01 K	•	•	-
00319	MotorTemp	Motor winding temperature.	0.01 K	-	CUE + S	-
00320	RemoteTemp1	Temperature at external sensor.	0.01 K	S	S	-
00321	ElectronicTemp	E-pump electronics temperature.	0.01 K	H	MGE	•
00322	PumpLiquidTemp	Pumped-liquid temperature.	0.01 K	G + S	S	•
00323	BearingTempDE	Bearing temperature, drive end.	0.01 K	-	CUE + S	-
00324	BearingTempNDE	Bearing temperature, non-drive end.	0.01 K	-	CUE + S	-
00325	AuxSensorInput	Auxiliary sensor input.	0.01 %	S	S	-
00326	SpecificEnergyConsumption	Specific energy consumption.	1 Wh/m ³	H + S	CUE + S	•
00327	OperationTimeHI	Total operating time of the system.	1 hour	•	•	•
00328	OperationTimeLO					
00329	TotalPoweredTimeHI	Total power-on time of the system.	1 hour	•	•	•
00330	TotalPoweredTimeLO					
00331	Torque	Motor torque.	0.1 Nm	-	•	-
00332	EnergyHI	Total energy consumption of the system.	1 kWh	•	•	•
00333	EnergyLO					

Address	Register name	Description	Scale	0.25 - 7.5 kW	11-22 kW + CUE	MAGNA3
00334	NumberOfStartsHI	Number of times the E-pump has been started.	1 start	•	•	•
00335	NumberOfStartsLO					
00336	RESERVED	-				
00337	RemoteTemp2	Temperature at external temperature sensor 2.	0.01 K	H + S	-	S
00338	UserSetpoint	User-selected setpoint. Open loop: % of nominal frequency. Closed loop: % of setpoint range.	0.01 %	•	•	•
00339	Diffpressure	Pressure between pump flanges.	0.001 bar	H + S	-	•
00340	OutletPressure	Pressure at pump outlet.	0.001 bar	H + S	-	-
00341	RemotePressure2	Pressure measured by external sensor 2.	0.001 bar	H + S	-	-
00342	LoadPercent	Motor current in percent of rated motor current.	0.01 %	H	-	-
00343	PumpUnixRtcHI	Pump time and date in UNIX format (seconds since 01-01-1970 00:00:00).	1 second	H	-	•
00344	PumpUnixRtcLO					
00345	MaxFlowLimit	Actual maximum flow limit.	0.1 m ³ /h	H	-	•
00346	RemoteDiffTemp	Remote differential temperature ..	0.01 K	H + S	-	-
00347	InletDiffPressure	Inlet differential pressure.	0.001 bar	H + S	-	-
00348	OutletDiffPressure	Outlet differential pressure.	0.001 bar	H + S	-	-
00349	RemoteDiffPressure	Remote differential pressure.	0.001 bar	H + S	-	-
00350	StorageTankLevel	Storage tank level. Offset -100.	0.01 m	H + S	-	-
00351	AmbientTemp	Ambient temperature.	0.01 K	H + S	-	-
00352	HeatEnergyCounter1HI▶	Total accumulated heat energy in pump lifetime (direction 1).	1 kWh	H + S	-	S
00353	HeatEnergyCounter1LO▶					
00354	HeatPowerHI▶	Actual heat power.	1 W	H + S	-	S
00355	HeatPowerLO▶					
00356	HeatDiffTemp▶	Differential temperature between forward and return pipe used for heat calculation.	0.01 K	H + S	-	S
00357	Volume1HI	Total pumped volume (direction 1).	0.01 m ³	H + S	CUE + S	•
00358	Volume1LO					
00359	HeatEnergyCounter2HI▶	Total accumulated heat energy in pump lifetime (direction 2).	1 kWh	H + S	-	S
00360	HeatEnergyCounter2LO▶					
00361	Volume2HI	Total pumped volume (direction 2).	0.01 m ³	H + S	-	•
00362	Volume2LO					

▶: The availability of these measurements requires that the data register 00302 VolumeFlow is available and that a differential temperature measurement is established by one of the below means:

MGE model H and later:

- Direct measurement, where an analog or temperature input has been configured to Remote differential temperature RemoteDiffTemp (register 00346).
- PumpLiquidTemp (register 00322) measured by build-in Grundfos sensor and RemoteTemp2 (register 00337) measured by analog or temperature input.
- RemoteTemp1 (register 00320) and RemoteTemp2 (register 00337) measured by analog or temperature input.

MAGNA3:

For the calculation, an estimated flow value and measurement of the liquid temperature by the build-in temperature sensor is used. Connection of an external temperature sensor is needed for the pump to calculate the needed differential temperature.



A data value of 0xFFFF indicates "not available".



Estimated flow can be used for monitoring purposes only. We do not recommend it for controlling purposes.

9.8 Sensor-dependent measurements

Many of the measurement registers require a particular sensor to be present.

Because a limited number of sensors are available, only a few of the "S" marked data modules are available simultaneously.

The following sections describe the relation between available Modbus measurement registers and the setup of sensors. The description is split into sections for different pump types, because the approach varies.

Old MAGNA and UPE pump types

- No connection of external sensor possible.

MAGNA3

- Connection of temperature sensor and selection of analog input function "Constant temperature control" will make RemoteTemp2 (00337) measurement available.
- Connection of pressure sensor and selection of analog input function "Constant pressure control" will make RemotePressure1 (00316) measurement available.

CUE and all E-pump types except models H and later

Sensor unit configuration with handheld or PC Tool	Modbus data registers generated from sensor measurement		
	Feedback sensor (AI1)	Measuring sensor ⁴⁾ (AI2)	Measuring sensor ⁵⁾ (AI3)
bar			
mbar			
m	Head (00301)	Head (00301) and FeedTankLevel (00317) ⁶⁾ or InletPressure (00315)	Head (00301) and FeedTankLevel (00317) ⁶⁾ or RemotePressure1 (00316)
kPa	FeedTankLevel (00317) ⁶⁾		
psi			
ft			
m ³ /h			
m ³ /s	VolumeFlow (00302)	VolumeFlow (00302) or RemoteFlow (00314)	VolumeFlow (00302) or RemoteFlow (00314)
l/s			
gpm			
°C	RemoteTemp1 (00320)	PumpLiquidTemp (00322)	PumpLiquidTemp (00322) or RemoteTemp1 (00320)
°F			
%	AuxSensorInput (00325)	AuxSensorInput (00325)	AuxSensorInput (00325)

4) CUE and 11-22 kW E-pumps only.

5) CUE, 11-22 kW E-pumps and model G only.

6) Only if "m" or "ft" is selected.

E-pump models H and later

Measured parameters (selected from display or handheld)					
Parameter	Analog input AI1, AI2, AI3	Temperature Pt100 input T1, T2	Grundfos built-in sensor	Grundfos LiqTec sensor	Mapped to Modbus register
Pump inlet pressure	•				InletPressure (00315)
Pump inlet diff. pressure	•				InletDiffPressure (00347)
Pump outlet pressure	•				OutletPressure (00340)
Pump outlet diff. pressure	•				OutletDiffPressure (00348)
Pump diff. pressure	•		•		DiffPressure (00339)
Remote pressure 1	•				RemotePressure1 (00316)
Remote pressure 2	•				RemotePressure2 (00341)
Remote diff. pressure	•				RemoteDiffPressure (00349)
Feed tank level	•				FeedTankLevel (00317)
Storage tank level	•				StorageTankLevel (00350)
Pump flow	•				VolumeFlow (00302)
Remote flow	•				RemoteFlow (00314)
Pumped liquid temp	•	•	•	•	PumpLiquidTemp (00322)
Temperature 1	•	•			RemoteTemp1 (00320)
Temperature 2	•	•			RemoteTemp2 (00337)
Remote diff. temp	•				RemoteDiffTemp (00346)
Ambient temperature	•	•			AmbientTemp (00351)
Motor bearing temp. BE		•			BearingTempDE (00323)
Motor bearing temp. NDE		•			BearingTempNDE (00324)
Other parameter	•				AuxSensorInput (00325)

9.9 Alarm simulation register block (not CUE)

Alarm simulation can be used to simulate alarms and warnings on the E-pump. This is typically used when testing alarm event handling in BMS/SCADA system controllers. Whether the Simulation. AlarmCode register or the Simulation. WarningCode register is used makes no difference. The pump will in both cases react according to the predefined reaction to the code in question.

For the complete list, see chapter Alarms and warnings.

Not all codes apply to all E-pump types.

Address	Register name	Description	0.25 - 7.5 kW	11-22 kW	MAGNA3
00701	Simulation. AlarmCode	Alarm code to simulate.	H	•	•
00702	Simulation. WarningCode	Warning code to simulate.	H	•	•
00708	Simulation. Activate	Used to activate alarm simulation with alarms and warnings selected from registers 00701 and 00702. 0: Deactivate simulation 1: Activate simulation	H	•	•
00709	Simulation. Active	Status on alarm simulation. 0: Alarm simulation not active 1: Alarm simulation active	H	•	•

•: Always available.

H: Only available on model H and later versions.

Related information

[10.4 Alarms and warnings](#)







9.10 User register block

Address	Register name	R/W	Scale	Description
00751-00800	UserRegisters	R/W	Unscaled	This area is for device labelling by the user. The user area values are stored in the device and will remain after a power-off.

10. Detailed descriptions of registers

10.1 Control mode

The supported control modes are described further in this section. The control mode is set with register 00102 and its status can be read from register 00203.

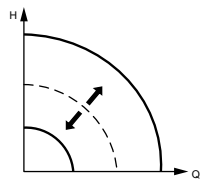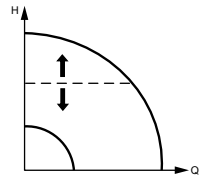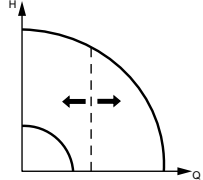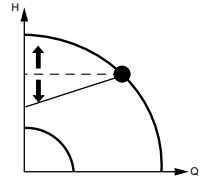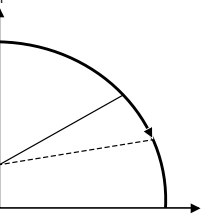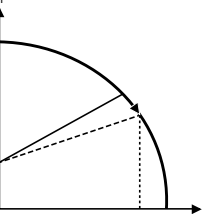Control modes	Description	Illustration
> Constant speed (0) > Constant frequency (1)	Open loop The setpoint of the E-pump is interpreted as the setpoint for the performance. The setpoint value is a percentage of the maximum performance of the E-pump. No sensor is required in these modes.	 TM079755
> Constant head (3) > Constant pressure (4) > Constant differential pressure (5)	Closed loop: The setpoint of the E-pump is interpreted as the setpoint for the pressure. The E-pump adapts the speed so that the pressure is constant, regardless of the flow. A pressure sensor is required, except for MAGNA3.	 TM079756
> Constant flow (7) > Constant temperature (8) > Constant level (10)	Closed loop: The setpoint of the E-pump is interpreted as the setpoint for the flow, temperature or level. Constant flow is indicated in the diagram. A relevant sensor is required: a flow sensor for flow control a temperature sensor for temperature control a level sensor for level control	 TM079754
> Proportional pressure (6)	Closed loop: The setpoint of the E-pump is interpreted as the setpoint in proportional-pressure mode as shown in the diagram. A pressure sensor is required, except for MAGNA3.	 TM079757
> AUTOADAPT (128)	In this control mode, the setpoint curve is a proportional-pressure curve where the setpoint has been set from factory. The AUTOADAPT algorithm in the pump will, over time, optimise the setpoint value according to the pipe characteristics of the system. The setpoint curve is adjusted in a downward direction. A pressure sensor is required, except for MAGNA3.	 TM053241
> FLOWADAPT (129)	This control mode works similar to AUTOADAPT, except that the flow-limiting function, FLOWLIMIT, is always active and limits the flow to the value ActualMaxFlowLimit. A pressure sensor is required, except for MAGNA3.	 TM053242
> Closed-loop sensor (130)	This is a general purpose closed-loop control mode that you can use in cases where the pump is used for a type of control not covered by one of the other control mode	

H: Pressure (head)

Q: Flow

10.2 Setpoint in closed-loop control

The setpoint is written to register 00104 Setpoint as a percentage value scaled in 0.01 % of the setpoint range. The selected setpoint is reflected in register 00338 UserSetpoint with the same scaling.

The actual setpoint, whether it has been set via Grundfos GO, the pump display, the pump buttons or the fieldbus, can be read from register 00308 ActualSetpoint. It is a percentage value scaled in 0.01 % of register 00211 FeedbackSensorMax.


Generally, the actual setpoint value represents head, pressure, flow, temperature and so on depending on how the feedback sensor has been set to measure. The unit of measure can be read from register 00209 FeedbackSensorUnit.

It is easy to calculate back and forth between the setpoint in percent and its scaled value:

$$X_{\text{act}}[\text{unit}] = X_{\text{set}}[\%] \times (r_{\text{max}} - r_{\text{min}}) + r_{\text{min}}$$

Where:

- $r_{\text{max}} = \text{SetpointRangeMax} \times \text{FeedbackSensorMax} \times \text{FeedbackSensorUnit}$
- $r_{\text{min}} = \text{SetpointRangeMin} \times \text{FeedbackSensorMax} \times \text{FeedbackSensorUnit}$

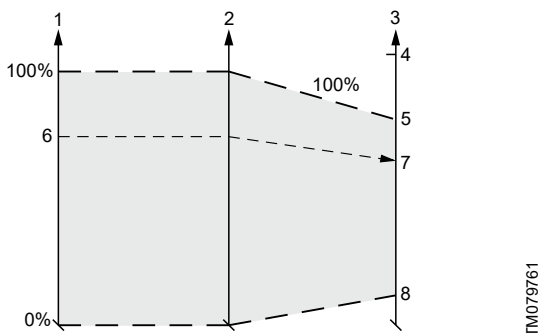

Setpoint in closed-loop control

Pos.	Description
1	Setpoint ⁷⁾ (Register 00104)
2	UserSetpoint ⁷⁾ (Register 00343)
3	ActualSetpoint ⁸⁾ (00308)
4	FeedbackSensorMax (Register 00222)
5	r_{max}
6	X_{set}
7	X_{act}
8	r_{min}

⁷⁾ Percentage of setpoint range.

⁸⁾ Percentage of sensor maximum.

MAGNA3 40-100 example

SetpointRangeMin: 5 %.

SetpointRangeMax: 50 %.

FeedbackSensorMax: 20.

FeedbackSensorUnit: m.

$$r_{\text{max}} = \text{SetpointRangeMax} \times \text{FeedbackSensorMax} \times \text{FeedbackSensorUnit} = 50 \% \times 20 \times \text{m} = 10 \text{ m}$$

$$r_{\text{min}} = \text{SetpointRangeMin} \times \text{FeedbackSensorMax} \times \text{FeedbackSensorUnit} = 5 \% \times 20 \times \text{m} = 1 \text{ m}$$

$$X_{\text{act}}[\text{unit}] =$$

$$X_{\text{set}}[\%] \times (r_{\text{max}} - r_{\text{min}}) + r_{\text{min}}$$

$$X_{\text{set}}[\%] \times (10 \text{ m} - 1 \text{ m}) + 1 \text{ m}$$


$$X_{\text{set}}[\%] \times 9 \text{ m} + 1 \text{ m}$$

If $X_{\text{set}}[\%]$ has value 40 %, the pump will have an actual setpoint of $40 \% \times 9 \text{ m} + 1 \text{ m} = 4.6 \text{ m}$.

10.3 Setpoint in open-loop control

The setpoint is written to register 00104 Setpoint as a percentage value scaled in 0.01 % of the nominal frequency f_{nom} represented by register 00212 NomFrequency. The selected setpoint is reflected in register 00338 UserSetpoint with the same scaling. From fieldbus, it will get whatever value written to Setpoint. From pump display and Grundfos GO, it is limited to range $[f_{\text{min}}; f_{\text{max}}]$, represented by 00214 MaxFrequency and 00213 MinFrequency.

The actual setpoint, whether it has been set via Grundfos GO, the pump display, the pump buttons or the fieldbus, can be read from register 00308 ActualSetpoint, and it always reflects the frequency limitations. It equals the value that the pump actually uses.

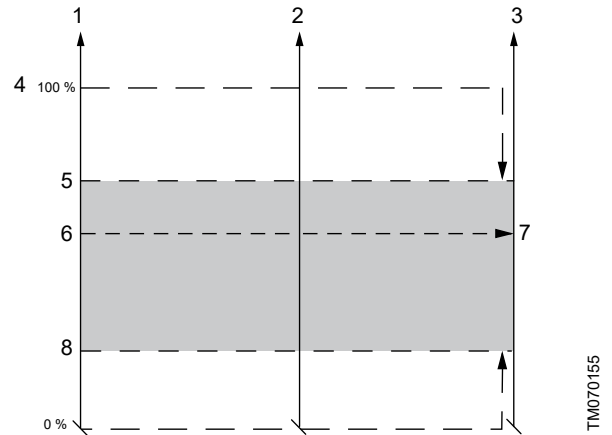

Setpoint in open-loop control

Pos.	Description
1	Setpoint ⁹⁾ (Register 00104)
2	NomFrequency, Hz (Register 00212)
3	100 %
4	MaxFrequency (Register 00214)
5	X_{set}
6	MinFrequency (Register 00213)
7	0 %
8	UserSetpoint ⁹⁾ (Register 00338)
9	ActualSetpoint ⁹⁾ (Register 00308)
10	X_{act}

⁹⁾ Percentage of f_{nom} .

For MGE motors and the CUE drive

- $[f_{\text{min}}; f_{\text{max}}]$ can be adjusted from the pump display and Grundfos GO.
- With $f_{\text{max}} > f_{\text{nom}}$ a setpoint above 100 % is possible, over synchronous.

For MAGNA3

- $[f_{\text{min}}; f_{\text{max}}]$ are fixed.
- f_{max} always equals f_{nom} .

10.4 Alarms and warnings

Address	Name	Description
00206	WarningCode	Code for E-pump warning.
00205	FaultCode	Code for E-pump alarm.

In the WarningCode register, the cause of an E-pump warning can be read. A warning has no influence on the E-pump operation.

In the FaultCode register, the cause of an E-pump alarm can be read. An E-pump alarm always leads to a reaction in the E pump operation. Usually the E-pump is stopped, but some alarms in some E-pump types have programmable alarm action types.

The complete list of possible alarm and warning codes is shown below. Not all codes apply to all E-pump types.

Code	Alarm/warning description
1	Leakage current
2	Missing phase
3	External fault signal
4	Too many restarts
7	Too many hardware shutdowns
14	Electronic DC-link protection activated (ERP)
16	Other
29	Turbine operation, impellers forced backwards
30	Change bearings (specific service information)
31	Change varistor(s) (specific service information)
32	Overvoltage
40	Undervoltage
41	Undervoltage transient
42	Cut-in fault (dV/dt)
45	Voltage asymmetry
48	Overload
49	Overcurrent (i_line, i_dc, i_mo)
50	Motor protection function, general shutdown (MPF)
51	Blocked motor or pump
54	Motor protection function, 3 sec. limit
55	Motor current protection activated (MCP)
56	Underload
57	Dry-running
60	Low input power
64	Overtemperature
65	Motor temperature 1 (t_m or t_mo or t_mo1)
66	Control electronics temperature high
67	Temperature too high, internal frequency converter module (t_m)
68	Water temperature high
70	Thermal relay 2 in motor, for example thermistor
72	Hardware fault, type 1
73	Hardware shutdown (HSD)
76	Internal communication fault
77	Communication fault, twin-head pump
80	Hardware fault, type 2
83	Verification error, FE parameter area (EEPROM)
84	Memory access error
85	Verification error, BE parameter area (EEPROM)
88	Sensor fault
89	Signal fault, (feedback) sensor 1
91	Signal fault, temperature 1 sensor
93	Signal fault, sensor 2
96	Setpoint signal outside range
105	Electronic rectifier protection activated (ERP)
106	Electronic inverter protection activated (EIP)
148	Motor bearing temperature high (Pt100) in drive end (DE)

Code	Alarm/warning description
149	Motor bearing temperature high (Pt100) in non-drive end (NDE)
155	Inrush fault
156	Communication fault, internal frequency converter module
157	Real time clock error
161	Sensor supply fault, 5 V
162	Sensor supply fault, 24 V
163	Measurement fault, motor protection
164	Signal fault, LiqTec sensor
165	Signal fault, analog input 1
166	Signal fault, analog input 2
167	Signal fault, analog input 3
175	Signal fault, temperature 2 sensor
176	Signal fault, temperature 3 sensor
190	Limit exceeded, sensor 1
191	Limit exceeded, sensor 2
215	Soft pressure buildup timeout
240	Lubricate bearings (specific service information)
241	Motor phase failure
242	Automatic motor model recognition failed

11. Modbus RTU commissioning, step-by-step guides



If the sensor configuration is changed, restart the CIM module or CIU unit to ensure a correct scaling of the sensor value.

11.1 Hardware setup, CIM 200

Step	Action
1	Install CIM 200 in the Grundfos product according to the product documentation.
2	Complete the product configuration, for example sensor configuration. This can be done either on the pump control panel, via Grundfos GO.
3	Select the Modbus slave address (1-247).
4	Select the bit rate of the Modbus slave.
5	Select parity and stop bits of the Modbus slave, even parity with 1 stop bit or no parity with 2 stop bits.
6	If necessary, set line termination.
7	Connect the necessary cables from CIM 200 to the Modbus network.
8	Confirm that the GENIbus LED is permanently green and that the Modbus LED is either off, if no master is actively polling the slave, or flashing green, indicating error-free communication.
CIM 200 is now ready to be accessed via the Modbus network.	

11.2 Hardware setup, CIU 200

Step	Action
1	Complete the pump configuration, for example sensor configuration and local mode. This can be done either via Grundfos GO or Grundfos PC Tool E-Products.
2	Select the Modbus slave address (1-247).
3	Select the transmission speed of the Modbus slave.
4	Select parity and stop bits of the Modbus slave, even parity with 1 stop bit or no parity with 2 stop bits.
5	If necessary, set line termination.
6	Connect the GENIbus cable from CIU 200 to the E-pump.
7	Connect the necessary cables from CIU 200 to the Modbus network.
8	Connect the power cable to CIU 200, and switch the unit on.
9	Confirm that the GENIbus LED is permanently green and that the Modbus LED is either off, if no master is actively polling the slave, or flashing green, indicating error-free communication.
CIU 200 is now ready to be accessed via the Modbus network.	

11.3 Hardware setup, CIM 260 data connection

Step	Action
1	Install CIM 260 in the Grundfos product according to the product documentation.
2	Fit an antenna to the CIM module SMA connector.
3	Insert the SIM card in CIM 260.
4	Power on the Grundfos product.
5	Observe that LED2 turns permanently green.
6	Observe that LED1 blinks yellow and changes to yellow pulsing after approximately 30 seconds, indicating that the cellular network connection is working.
7	To configure CIM 260 for a data connection, follow the instructions in the "CIM 260 SMS commands installation and operating instructions", which you can download from Grundfos Product Center.
8	To verify the APN settings after completion, use the SMS command "APNSETTINGS". To verify that the data connection is working, use the SMS command "APNSTATUS". The connection state must be "Context active" if ready and "Connected" if a Modbus TCP master is already communicating.
CIM 260 is now ready to be accessed from a Modbus TCP master via a data connection, or via SMS commands.	

Related information

[6.1.1 Fitting a cellular antenna](#)

[6.1.2 Inserting the SIM card](#)

[6.2 Status LEDs](#)

11.4 Hardware setup, CIU 260 data connection

Step	Action
1	Connect the GENIbus cable from CIU 260 to the Grundfos product. See the CIU quick guide instruction.
2	Fit an antenna to the CIM module SMA connector.
3	Insert the SIM card in CIM 260.
4	Connect the mains cable to CIU 260, see the CIU quick-guide instruction, and power on CIU 260.
5	Power on the Grundfos product.
6	Observe that LED2 turns permanently green, indicating that the GENIbus connection is working.
7	Observe that LED1 blinks yellow and changes to yellow pulsing after approximately 30 seconds, indicating that the cellular network connection is working.
8	To configure CIM 260 for a data connection, follow the instructions in the "CIM 260 SMS commands installation and operating instructions", which you can download from Grundfos Product Center.
9	To verify the APN settings after completion, use the SMS command "APNSETTINGS". To verify that the data connection is working, use the SMS command "APNSTATUS". The connection state must be "Context active" if ready and "Connected" if a Modbus TCP master is already communicating.

CIU 260 is now ready to be accessed from a Modbus TCP master via a data connection, or via SMS commands.

Related information

[6.1.1 Fitting a cellular antenna](#)

[6.1.2 Inserting the SIM card](#)

[6.2 Status LEDs](#)

11.5 CIM 500 Modbus TCP communication setup

Step	Action
1	Install CIM 500 in the Grundfos product according to the product documentation.
2	Select position 1 at the protocol rotary switch.
3	Power on the product, and observe LED2 turn permanently green and LED1 remaining off.
4	Complete the pump configuration, for example sensor configuration.
5	Connect one of the CIM 500 Ethernet ports (RJ45) to a PC using an Ethernet cable.
6	Configure the PC Ethernet port to the same subnetwork as CIM 500, for example 192.168.1.1, and the subnet mask to 255.255.255.0.
7	Open your internet browser and make contact to the CIM 500 webserver. Default: 192.168.1.100
8	Log on to the webserver. Default: User: admin Password: Grundfos.
9	In the menu column to the left select: Configuration > Real time Ethernet protocol
10	Type in an IP address belonging to the same subnet as your PC, for example 192.168.1.2.
11	Type in the subnet mask 255.255.255.0, and leave the rest of the settings at their factory default values.
12	Click [Submit] to transfer the new settings, and close the internet browser.

CIM 500 is now ready to be accessed from a Modbus TCP master via one of its Ethernet ports. Use the IP address selected under step 9. The Modbus address (Unit ID) in the Modbus TCP telegram is not used.

CIM 500 LED1 will be flashing green when Modbus TCP communication takes place.

You can use the two Ethernet ports to daisy chain CIM 500 modules.

It is possible to have connection to the webserver simultaneously with a connection to a Modbus TCP master.

It is possible to have connection to more Modbus TCP masters simultaneously, for example to have connection to PC Tool CIM/CIU while connected to another Modbus TCP master.

Related information

[7.2 Setting the Industrial Ethernet protocol](#)

11.6 CIU 500 Modbus TCP communication setup

Step	Action
1	Check that both CIU 500 unit and the E-pump are powered off.
2	Remove the front cover of CIU 500.
3	Select position 1 at the CIM 500 module protocol rotary switch.
4	Connect the GENIbus cable from CIU 500 to the E-pump. See the "CIU, Communication Interface Unit installation and operating instructions" or see the CIU quick guide.
5	Power on CIU 500 and the E-pump, and observe LED2 turn permanently green and LED1 remaining off.
6	Connect one of the CIU 500 Ethernet ports (RJ45) to a PC using an Ethernet cable.
7	Configure the PC Ethernet port to the same subnetwork as CIM 500, for example 192.168.1.1, and the subnet mask to 255.255.255.0.
8	Open your internet browser and make contact to the CIM 500 webserver. Default: 192.168.1.100.
9	Log on to the webserver. Default: User: admin Password: Grundfos.
10	In the menu column to the left select: Configuration > Real time Ethernet protocol
11	Type in an IP address belonging to the same subnet as your PC, for example 192.168.1.2.
12	Type in the subnet mask 255.255.255.0, and leave the rest of the settings at their factory default values.
13	Click [Submit] to transfer the new settings, and close the internet browser.

CIM 500 is now ready to be accessed from a Modbus TCP master via one of its Ethernet ports. Use the IP address selected under step 10. The Modbus address (Unit ID) in the Modbus TCP telegram is not used.

CIU 500 LED1 will be flashing green when Modbus TCP communication takes place.

You can use the two Ethernet ports to daisy chain CIM 500 modules.

It is possible to have connection to the webserver simultaneously with a connection to a Modbus TCP master.

It is possible to have connection to more Modbus TCP masters simultaneously, for example to have connection to PC Tool CIM/CIU while connected to another Modbus TCP master.

Related information

[7.2 Setting the Industrial Ethernet protocol](#)


12. Detailed descriptions of functionality

12.1 APN

12.1.1 What is APN and Modbus TCP?

An APN connection (Access Point Name) is a wireless, "always on" connection that remains active as long as CIU 260 is within range of the service. With a data connection, it is possible to establish a wireless connection to the Internet and thus enable a remote connection to a SCADA system computer or another PC application.

The APN connection itself takes care of the wireless data transfer via the cellular network. It plays the same role as Ethernet in a wired network. We will refer to an APN connection as a data connection, and it also makes use of the TCP/IP protocol, which enables easy integration with the Internet. The Modbus TCP protocol is used on the application layer communicating with a TCP port number (default 502). The difference when compared to the fieldbus protocol Modbus RTU is the exclusion of the 16-bit CRC checksum and the adding of a Modbus application program header as illustrated.

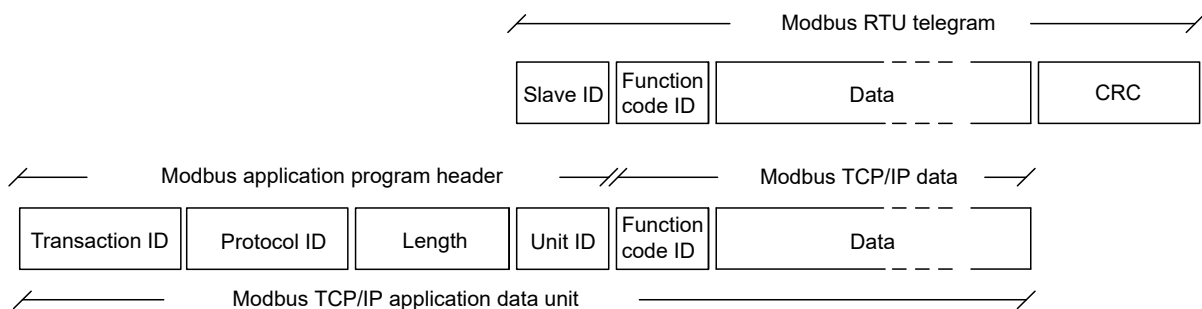

Modbus TCP telegram

12.1.2 Subscription

You have to select the service provider and the technical solution that best suits your system, and it must be based on static IP addressing. You will get the following from the service provider:

- A Subscriber Identity Module (SIM card).
- An Access Point Name (APN), for example "Internet".
- A fixed user name that cannot be changed by the user.
- A fixed password that cannot be changed by the user.
- A static IP address.

Solutions based on a VPN, Virtual Private Network, involve the use of special routers, for example GRE, Generic Routing Encapsulation, routers, which you also get from the service provider.

12.1.3 Installation

To prepare CIU 260 for data communication, some settings have to be made via SMS commands:

- Select Access Point Name:
APN <ASCII string>
This is always mandatory.
- Select Username:
USERNAME <ASCII string>
The need for a user name depends on your operator and the type of subscription.
- Select Password:
PASSWORD <ASCII string>
The need for a password depends on your operator and the type of subscription.
- Setting a SCADA PIN code:
SETSCADACODE <access code>
Will enable write access protection. Default is an empty SCADA PIN code, meaning no protection.
- Activating the SCADA PIN code:
SCADACODE <ON | OFF>.
Default is "Off".
- Selecting the Modbus address:
MODBUSADDR <1-247>
Default value is 231.

To verify the SCADA settings after completion, use the SMS command "SCADA".

Some advanced APN related settings have default values that usually work, but in special cases it might be necessary to change some of them. This is also done via SMS commands.

- Select Authentication:
AUTHENTICATION <NORMAL | SECURE>
Only used by some service providers. Default value is "Normal".
- Select Connection type:
CONNECTION <SERVER | CLIENT | DISABLE>
Default value is "Server".
- Set data roaming:
DATAROAMING: <ON | OFF>
Default value is "Off".
- Select Modbus TCP port number:
MODBUSPORT <port no.>
Default value is 502.
- Select GENIpro port number:
GENIPROPORT <port no.>
Default value is 49152. This is only relevant when using Grundfos PC Tools.

It is possible to configure the APN connection with a single multi-parameter command:

- SETAPN <parameter 1, parameter 2, parameter 3, ...>
- <parameters>: <APN>, <Modbus port>, <GENIproport>, <username>, <password>, <authentication>, <connection>, <data roaming>, <data silence timeout>

Example

SETAPN Grundfos.dk2.tdc,502,49888,Grundfos,4321,normal,server,off, 60.

To verify the APN settings after completion, use the SMS command "APNSETTINGS". The command "APNSTATUS" can verify if the APN connection is working.

The connection states have the following meaning:

- "Detached": Trying to locate APN connection service.
- "Attached": APN connection service located.
- "Context active": IP address has been assigned, ready for a client to establish a socket connection.
- "Connected": A client has established a socket connection. The system is ready for TCP/IP data exchange, or already exchanging data.

For details about the use of SMS commands, see "CIM 260 SMS commands", which you can download from Grundfos Product Center.

12.1.4 Operation

When powering on CIU 260 with the correct APN setting, the following APN connection sequence will take place:

1. CIU 260 locates the APN service. The connection state changes from "Detached" to "Attached".
2. CIU 260 attempts to connect to the APN it has been given and requests an IP address. The base station looks through its record of legal SIM cards and finds the IP address, the address associated with this SIM card, to assign to CIU 260. After CIU 260 has got the IP address, the connection state changes to "Context active".

3. CIU 260 is now ready for a client, for example the SCADA system, to establish a socket connection and begin TCP/IP data exchange. When a client connects CIU 260, the connection state will change to "Connected", and the cellular connection status LED1 indicates when data transfer takes place.



When no data is being transferred, the connection states "Attached", "Context active" and "Connected". All show the same LED1 status (short pulse).


A client, for example SCADA, establishes connection to CIU 260 by specifying the IP address and the TCP port 502. Data transfer is always initiated from the client in the form of a Modbus TCP telegram embedded in a TCP/IP frame and directed to TCP port 502. To the client software, the connection to CIU 260 is completely transparent.

The protection against unauthorised data access is high. The access to the APN network from the Internet can only take place via the VPN tunnel. Moreover, data transfer requires a Modbus master client, knowledge of the Modbus functional profile and the use of a SCADA PIN code, if enabled.

CIU 260 supervises the APN connection to ensure that it is still working. An automatic procedure ensures restarting of CIU 260 and repetition of the APN connection sequence in case a deadlock situation has occurred. It also closes down socket connections that are left open by the client and unused for more than 24 hours.


It is possible to use SMS communication while data communication is active. However in the "Connected" state, the delay time between reception and reply increases.

A total of three Modbus clients can be connected to the Modbus TCP port of CIU 260 and communicate simultaneously. Each connection, called a socket connection, is handled independently. If all three sockets are used simultaneously, a "Silence time-out" of only one minute is used to prevent a complete occupation for a long time.

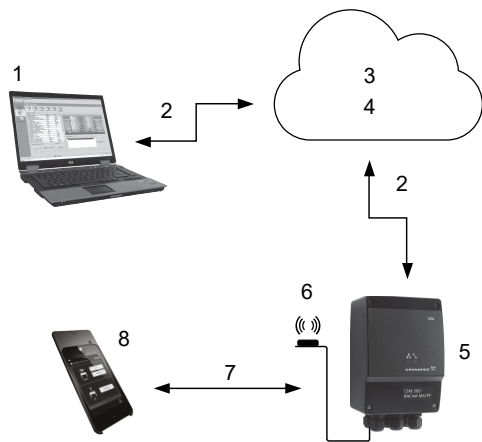

Data connection directly from a PC to CIU 260

Pos.	Description
1	PC Tool, etc.
2	"Static" IP address
3	Cellular network
4	Base station APN
5	CIU 260 with CIM 260 and SIM card
6	Cellular network
7	Setup, status and control commands via SMS
8	Mobile phone

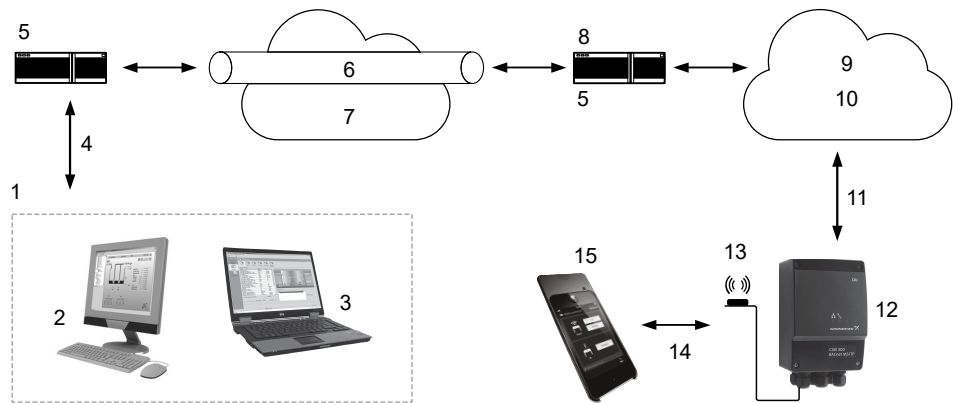

Cellular connection via VPN tunnel

Pos.	Description
1	Clients
2	SCADA system
3	PC Tool, etc.
4	LAN
5	GRE router
6	VPN tunnel
7	Internet
8	Cellular operator
9	Cellular network
10	Base station APN
11	"Static" IP address
12	CIU 260 with CIM 260 module and SIM card
13	Cellular network
14	Setup, status and control commands via SMS
15	Mobile phone

Related information

5.5 Status LEDs

13. Modbus RTU telegram examples



The Modbus data model states that registers numbered X are addressed in telegrams as X - 1, for example register 00104 (setpoint) is addressed as 00103 in a Modbus telegram.

Note that CRC fields are not shown in the following examples.

13.1 Modbus telegram overview

The maximum size of a Modbus RTU telegram is 256 bytes. Telegrams must be separated by a silent interval of at least 3.5 character times.

The standard Modbus RTU telegram format is shown in the table below.

Slave address	Function code	Data	CRC
1 byte	1 byte	0 to 252 bytes	2 bytes

A telegram starts with the slave address occupying one byte. Then comes a variable-size data field. For each telegram, a CRC is calculated and appended to the telegram, two bytes total. All bytes in the telegram, except for the CRC itself, are included in the check.

Note that the CRC bytes are not shown in the examples in the following sections.

13.2 Read holding registers, 0x03

This function is used for reading holding registers from the slave. The request telegram specifies the starting address, that is the address of the first register to be read, and the number of holding registers to read. In the telegram, register addresses start from zero, meaning that registers numbered 0-16 are addressed as 0-15.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x03
Start address HI	0x00
Start address LO	0x6B
Quantity HI	0x00
Quantity LO	0x03

In the request, the slave with address 1 is asked to deliver three contiguous registers starting from address 0x006b: 107, meaning register 108.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x03
Byte count	0x06
Register 108 HI	0x00
Register 108 LO	0x01
Register 109 HI	0x00
Register 109 LO	0x01
Register 110 HI	0x00
Register 110 LO	0x01

In the response, the byte count is six since there are three registers of two bytes. All three registers hold the value of 0x0001.

13.3 Read input registers, 0x04

This function is used for reading input registers from the slave. Input registers are read-only registers by definition. The request telegram specifies the starting address, that is the address of the first register to be read, and the number of holding registers to read. In the telegram, register addresses start from zero, meaning that registers numbered 0-16 are addressed as 0-15.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x04
Start address HI	0x10
Start address LO	0x10
Quantity HI	0x00
Quantity LO	0x03

In the request, the slave with address 1 is asked to deliver three contiguous registers starting from address 0x1010: 4112, meaning register 4113.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x04
Byte count	0x06
Register 4113 HI	0x22
Register 4113 LO	0x22
Register 4114 HI	0x22
Register 4114 LO	0x22
Register 4115 HI	0x22
Register 4115 LO	0x22

In the response, the byte count is six since there are three registers of two bytes. All three registers hold the value of 0x2222.

13.4 Write single register, 0x06

This function is used for writing a single holding register in the slave. The request telegram specifies the address of the register that is to be written. Register addresses start from zero, meaning that a register numbered 10 is addressed as 9.

The normal response is an echo of the request, indicating that the value was written.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x06
Address HI	0x10
Address LO	0x00
Value HI	0xAF
Value LO	0xFE

In the request, the slave with address 1 is asked to write the value of 0xAFFE to the register at address 0x1000.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x06
Address HI	0x10
Address LO	0x00
Value HI	0xAF
Value LO	0xFE

The response is an echo of the request.

13.5 Write multiple registers, 0x10

This function is used for writing a block of contiguous holding registers in the slave. Register addresses start from zero, meaning that a register numbered 100 is addressed as 99.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x10
Start address HI	0x00
Start address LO	0x20
Quantity HI	0x00
Quantity LO	0x02
Byte count	0x04
Register 33 HI	0x00
Register 33 LO	0x01
Register 34 HI	0xB0
Register 34 LO	0xB0

In the request, the slave with address 1 is asked to write the value of 0x0001 to the register at address 0x0020 and the value of 0xB0B0 to the register at address 0x0021.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x10
Start address HI	0x00
Start address LO	0x20
Quantity written HI	0x00
Quantity written LO	0x02

The response returns the function code, starting address and quantity of registers written.

13.6 Diagnostics, 0x08

Only supported by CIM 200 Modbus RTU.

This function provides a test for checking the communication system between the master and the Grundfos slave. It contains a single-byte subcode to identify the test to be performed.

The following subcodes are supported:

Subcode	Name
0x00	Return query data Data in this request are to be echoed in the response. The response must be identical to the request, so this function is often used to verify Modbus communication.
0x01	Restart communications All communication counters are cleared, and the device is restarted.
0x02	Return diagnostics register Returns the 16-bit diagnostics register.
0x04	Force listen only Forces the device into listen-only mode. This effectively mutes the device, making it unable to communicate on the network. To bring the device back to normal mode, a "Restart communications" command, code 0x08, subcode 0x01, must be issued.
0x0A	Clear counters and diagnostics register Clears all counters and the diagnostics register. These are also cleared on power-up and restart.
0x0B	Return bus message count Returns the number of messages detected by the slave.
0x0C	Return bus CRC error count Returns the number of CRC errors in the slave.
0x0D	Return bus exception count Returns the number of Modbus exception responses that the slave has transmitted.
0x0E	Return slave message count Returns the number of messages that the slave has processed.
0x0F	Return slave no response count Returns the number of messages for which the slave has sent no response.

Example of request from master to slave

Field	Value
Address	0x01
Function code	0x08
Subcode	0x00
Data	0xAB
Data	0xCD

The response is identical to the request.

Example of response from slave to master

Field	Value
Address	0x01
Function code	0x08
Subcode	0x00
Data	0xAB
Data	0xCD

Related information

[13.7 Diagnostics register interpretation](#)

13.7 Diagnostics register interpretation

The diagnostics register is interpreted as follows:

Bit	Description
0	Communication failure, with the Grundfos E-pump.
1	RESERVED
2	Grundfos E-pump is not supported.
3	Modbus address offset is different from default value, i.e. it differs from 0.
4	Using software-defined Modbus transmission speed.
5	RESERVED
6	RESERVED
7	RESERVED
8	RESERVED
9	RESERVED
10	RESERVED
11	RESERVED
12	RESERVED
13	RESERVED
14	RESERVED
15	RESERVED

A bit value of 1 means true, unless otherwise specified. The diagnostics register is read using function code 0x08 and subcode 0x02.

13.8 Diagnostics: return query data

This function is useful to ensure that the communication path and slave configuration are correct. It will echo the request in the response.

In the example, slave address 0x01 is used.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x08	Diagnostics
Subcode	0x00	Echo request
Data	0xAB	Test data
Data	0xCD	Test data

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x08	Diagnostics
Subcode	0x00	Echo request
Data	0xAB	Test data
Data	0xCD	Test data

If there is no response from the slave, see section Fault finding.

13.9 Reading the CIM configuration register block

This section shows how to read the first four registers of the CIM configuration register block.

In the example, slave address 0x01 is used.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Start address HI	0x00	Start address = 0x0001
Start address LO	0x00	
Quantity HI	0x00	Number of registers = 0x0004
Quantity LO	0x04	

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x04	Read input registers
Byte count	0x08	8 bytes follow
00001 HI	0x00	SlaveMinimumReplyDelay = 0x000A
00001 LO	0x0A	
00002 HI	0x00	RegisterOffset = 0x0000
00002 LO	0x00	
00003 HI	0x00	Reserved value = 0x0000
00003 LO	0x00	
00004 HI	0x00	SoftwareDefinedBitRate = 0x0004
00004 LO	0x04	

If there is no response from the slave, see Fault finding, section CIM/CIU 200 Modbus communication faults or CIM/CIU 260 3G/4G cellular communication faults.

Related information

[14.1.2 CIM/CIU 200 Modbus communication faults](#)

[14.2.2 CIM/CIU 260 3G/4G cellular communication faults](#)

13.10 Setting the setpoint

This section shows how to set a new setpoint (reference).

In the example, slave address 0x01 is used, and a value of 55 % (5500: 0x157C) is set as new setpoint.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	Setpoint address = 00104 (0x0068)
Start address LO	0x67	
Value HI	0x15	New setpoint value = 5500 (0x157C)
Value LO	0x7C	

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	Setpoint address = 00104 (0x0068)
Start address LO	0x67	
Value HI	0x15	New setpoint value = 5500 (0x157C)
Value LO	0x7C	

If there is no response from the slave, see section CIM/CIU 200 Modbus communication faults or CIM/CIU 260 3G/4G cellular communication faults.

Related information

[14.1.2 CIM/CIU 200 Modbus communication faults](#)

[14.2.2 CIM/CIU 260 3G/4G cellular communication faults](#)

13.11 Setting the control mode

This section shows how to set a control mode.

In the example, slave address 0x01 is used, and the control mode is set to 1 (Constant frequency).

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlMode address: = 00102 (0x0066)
Start address LO	0x65	
Value HI	0x00	New ControlMode value = 1 (0x0001)
Value LO	0x01	

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlMode address: = 00102 (0x0066)
Start address LO	0x65	
Value HI	0x00	New ControlMode value = 1 (0x0001)
Value LO	0x01	

If there is no response from the slave, see Fault finding, section CIM/CIU 200 Modbus communication faults or CIM/CIU 260 3G/4G cellular communication faults.

Related information

[14.1.2 CIM/CIU 200 Modbus communication faults](#)

[14.2.2 CIM/CIU 260 3G/4G cellular communication faults](#)

13.12 Starting the E-pump

This section shows how to start the E-pump.
In the example, slave address 0x01 is used.
Set the ControlRegister to the following values:

Bit 0:	1 (set the E-pump to remote mode)
Bit 1:	1 (start the E-pump)
Bit 2:	0 (do not send a reset fault command)
Bit 3:	0 (direction: clockwise rotation)
Bit 4:	0 (do not copy remote settings to local)
Bits 5-15:	0 (reserved values)

Hence the value to set is 0b0000000000000011: 0x0003.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address:
Start address LO	0x64	00101 (0x0065)
Value HI	0x00	ControlRegister value:
Value LO	0x03	3 (0x0003)

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address:
Start address LO	0x64	00101 (0x0065)
Value HI	0x00	ControlRegister value:
Value LO	0x03	3 (0x0003)

If there is no response from the slave, see section CIM/CIU 200 Modbus communication faults or CIM/CIU 260 3G/4G cellular communication faults.

Related information

- [14.1.2 CIM/CIU 200 Modbus communication faults](#)
- [14.2.2 CIM/CIU 260 3G/4G cellular communication faults](#)

13.13 Stopping the E-pump

This section shows how to stop the E-pump.
In the example, slave address 0x01 is used.
Set the ControlRegister to the following values:

Bit 0:	1 (set the E-pump to remote mode)
Bit 1:	0 (stop the E-pump)
Bit 2:	0 (do not send a reset fault command)
Bit 3:	0 (direction: clockwise rotation)
Bit 4:	0 (do not copy remote settings to local)
Bits 5-15:	0 (reserved values)

Hence the value to set is 0b0000000000000001: 0x0001.

Request from master to slave

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address:
Start address LO	0x64	00101 (0x0065)
Value HI	0x00	ControlRegister value:
Value LO	0x01	1 (0x0001)

Example of response from slave to master

Field	Value	Description
Slave address	0x01	-
Function code	0x06	Write single register
Start address HI	0x00	ControlRegister address:
Start address LO	0x64	00101 (0x0065)
Value HI	0x00	ControlRegister value:
Value LO	0x01	1 (0x0001)

If there is no response from the slave, see section CIM/CIU 200 Modbus communication faults or CIM/CIU 260 3G/4G cellular communication faults.

Related information

- [14.1.2 CIM/CIU 200 Modbus communication faults](#)
- [14.2.2 CIM/CIU 260 3G/4G cellular communication faults](#)

14. Fault finding the product

14.1 CIM 200

You can detect faults in CIM 200 by observing the status of the two communication LEDs.

Related information

[3.2 CIM 200 Modbus RTU](#)

14.1.1 LED status

CIM 200 fitted in a Grundfos E-pump

Fault (LED status)	Possible cause	Remedy
Both LED1 and LED2 remain off when the power supply is connected.	CIM 200 is fitted incorrectly in the Grundfos E-pump.	Ensure that CIM 200 is fitted and connected correctly.
	CIM 200 is defective.	Replace CIM 200.
LED2 for internal communication is flashing red.	No internal communication between CIM 200 and the Grundfos E-pump.	Ensure that CIM 200 is fitted correctly in the Grundfos E-pump.
LED2 for internal communication is permanently red.	CIM 200 does not support the Grundfos E-pump connected.	Contact the nearest Grundfos company.
The Modbus LED1 is permanently red.	Fault in the CIM 200 Modbus configuration.	<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. If the switches are set to "software-defined", an invalid value may have been set via Modbus. Try one of the preselected transmission speeds, for example 19200 bit/s. Check that the Modbus address, switches SW6 and SW7, has a valid value [1-247].
		<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. Check the parity setting, switch SW3. Check the cable connection between CIM 200 and the Modbus network. Check the termination resistor settings, switches SW1 and SW2.
The Modbus LED1 is flashing red.	Fault in the Modbus communication (fault in parity or cyclic redundancy check).	<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. Check the parity setting, switch SW3. Check the cable connection between CIM 200 and the Modbus network. Check the termination resistor settings, switches SW1 and SW2.

CIM 200 fitted in CIU 200

Fault (LED status)	Possible cause	Remedy
Both LED1 and LED2 remain off when the power supply is connected.	CIU 200 is defective.	Replace CIU 200.
The LED2 for internal communication is flashing red.	No internal communication between CIU 200 and the E-pump	<ul style="list-style-type: none"> Check the cable connection between the E-pump and CIU 200. Check that the individual conductors have been fitted correctly. Check the power supply to the E-pump.
The LED2 for internal communication is permanently red.	CIU 200 does not support the E pump which is connected.	Contact the nearest Grundfos company.
The Modbus LED1 is permanently red.	Fault in the CIM 200 Modbus configuration.	<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. If the switches are set to "software-defined", an invalid value may have been set via Modbus. Try one of the preselected transmission speeds, for example 19200 bit/s. Check that the Modbus address, switches SW6 and SW7 has a valid value [1-247].
		<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. Check the parity setting, switch SW3. Check the cable connection between CIM 200 and the Modbus network. Check the termination resistor settings, switches SW1 and SW2.
The Modbus LED1 is flashing red.	Fault in the Modbus communication (fault in parity or cyclic redundancy check).	<ul style="list-style-type: none"> Check the transmission speed, switches SW4 and SW5. Check the parity setting, switch SW3. Check the cable connection between CIM 200 and the Modbus network. Check the termination resistor settings, switches SW1 and SW2.

Related information

[5.1 Setting the Modbus transmission speed](#)

[5.2 Setting the stop bits and the parity bit](#)

[5.4 Termination resistor](#)

14.1.2 CIM/CIU 200 Modbus communication faults

Fault	Possible cause	Remedy
The slave does not respond to telegrams.	Configuration or wiring error.	<ul style="list-style-type: none"> Check the visual diagnostics on the Modbus slave. Is the Grundfos GENIbus LED flashing green and the Modbus LED off or flashing green? Ensure that the cable between the Modbus master and the Modbus slave is connected correctly. See section CIM 200 Modbus RTU setup for wiring recommendations. Ensure that the slave address is configured correctly, and that the correct slave address is used in the Modbus master poll. See section Modbus address selection for slave address selection. Ensure that the transmission speed and stop bit/parity settings are configured correctly in both master and slave. Ensure that each end of the Modbus trunk cable is terminated, if necessary. See section Termination resistor for line termination of the Grundfos slave. Ensure that the bus topology for a Modbus network is correct.
	The slave may be in listen-only mode.	Either send a restart communications diagnostics command, or restart the E-pump manually.
	If the holding register of address 00001 "SlaveMinimumReplyDelay" is set too high, the master may time out before receiving the response from the slave.	Increase the time-out span in the master in order to communicate.
The slave responds with exception response 0x01: "Invalid function".	The master is trying to use an unsupported function in the module or unit.	See section Modbus function code overview for supported function codes. Note that reading and writing coils are not supported, so only register functions and diagnostics are valid.
The slave responds with exception response 0x02: "Invalid data address".	The master is trying to read or write an invalid data address. If a master tries to read register addresses that are not listed in the tables, the slave responds with this exception response. Some masters may automatically try to read large blocks in one telegram, which will cause problems if some of the registers in the block are not supported. An example would be reading the CIM configuration and CIM status blocks in one telegram. This is not possible since there are unused addresses among the blocks.	<ul style="list-style-type: none"> Avoid reading or writing invalid data addresses. Make sure that register X is addressed as X - 1 in Modbus telegrams, according to the Modbus standard.
	The register address offset may have been changed from default.	Read the holding register at address 00002 "Register Offset" to see if this value is different from 0. If so, write the value 0 to this address to make the slave return to the default used in this functional profile.
The slave returns data value 0xFFFF (65535).	The value is unavailable. A data value of 0xFFFF does not necessarily indicate an error condition. It means that the value is unavailable from the E-pump.	See section Modbus register addresses for available data.
	The E-pump is not configured to show the value or lacks a sensor to read the value.	See section Pump data register block for data values that require a sensor.
The slave does not change Modbus transmission speed with register 0004.	Configuration error.	Set the transmission speed switches to "Software-defined". Otherwise, the value in register 0004 is ignored by the slave.
	An invalid value may be set in register 00004.	See section Setting the Modbus transmission speed for invalid values, and set correct value in register 00004.

Related information

[5. CIM 200 Modbus RTU setup](#)

[5.1 Setting the Modbus transmission speed](#)

[5.3 Modbus address selection](#)

[5.4 Termination resistor](#)

[8. Modbus function code overview](#)

[9.7 Pump data register block](#)

14.2 CIM/CIU 260

You can detect faults in CIU 260 by observing the status of the two communication LEDs.

Related information

[3.3 CIM 260 3G/4G cellular Modbus](#)

14.2.1 LED status

CIU 260 connected to an E-pump

Fault (LED status)	Possible cause	Remedy
Both LED1 and LED2 remain off when the power supply is connected.	CIU 260 is defective.	Replace CIU 260.
The LED2 for internal communication is flashing red.	No internal communication between CIU 260 and the E-pump.	<ul style="list-style-type: none"> Check the cable connection between the E-pump and CIU 260. Check that the individual conductors have been fitted correctly. Check the power supply to the E-pump.
LED2 for internal communication is permanently red.	CIU 260 does not support the connected version of the E-pump.	Contact the nearest Grundfos company.
LED1 for cellular communication is flashing yellow.	The SIM card has not been inserted.	Insert the SIM card.
	The SIM card has not been inserted correctly.	Insert the SIM card.
	The SIM card PIN code is not correct.	Enter the correct PIN code.
	No connection to the cellular network.	<ul style="list-style-type: none"> Check the connection to the antenna. Check the cellular coverage of the area using for instance a mobile phone. Use an external antenna and experiment with the position.
The LED1 for cellular communication is pulsating yellow with single pulse, but CIM 260 cannot send or receive SMS messages.	CIM 260 has not been initialised.	Follow the configuration procedure in "CIM 260 SMS commands", which you can download from Grundfos Product Center.

CIM 260 fitted in CIU 260

Fault (LED status)	Possible cause	Remedy
Both LED1 and LED2 remain off when the power supply is connected.	CIM 260 is fitted incorrectly in the Grundfos E-pump.	Ensure that CIM 260 is fitted and connected correctly.
	CIM 260 is defective.	Replace CIM 260.
LED2 for internal communication is flashing red.	No internal communication between CIM 260 and the Grundfos E-pump.	Ensure that the CIM 260 is fitted correctly in the Grundfos E-pump.
LED2 for internal communication is permanently red.	CIM 260 does not support the Grundfos E-pump connected.	Contact the nearest Grundfos company.
LED1 for cellular communication is flashing yellow.	The SIM card has not been inserted.	Insert the SIM card. See section Inserting the SIM card .
	The SIM card has not been inserted correctly.	Insert the SIM card. See section Inserting the SIM card .
	The SIM card PIN code is not correct.	Enter the correct PIN code. See section Inserting the SIM card .
	No connection to the cellular network.	<ul style="list-style-type: none"> Check the connection to the antenna. Check the cellular coverage of the area using for instance a mobile phone. Use an external antenna and experiment with the position.
The LED1 for cellular communication is pulsating yellow with single pulse, but CIM 260 cannot send or receive SMS messages.	CIM 260 has not been initialised.	Follow the configuration procedure in "CIM 260 SMS commands", which you can download from Grundfos Product Center.

Related information

[6.1.2 Inserting the SIM card](#)

[6.2 Status LEDs](#)

14.2.2 CIM/CIU 260 3G/4G cellular communication faults

Fault	Possible cause	Remedy
The slave does not respond to telegrams.	Configuration or installation error.	<ul style="list-style-type: none"> Ensure that CIU 260 has connection to the cellular network. LED1 must be pulsing yellow. If the LED1 signal is incorrect, see section CIM 260 3G/4G cellular Modbus setup for correct installation of the CIM 260. Ensure that the correct slave address is used in the Modbus master poll. See register 00003 SoftwareDefinedModbusAddress (factory value is 00231).
	The slave may be in listen-only mode.	Either send a restart communications diagnostics command, or restart the E-pump manually.
	If the holding register of address 00001 "SlaveMinimumReplyDelay" is set too high, the master may time out before receiving the response from the slave.	Increase the reply delay in the master, or reduce the "SlaveMinimumReplyDelay" in order to communicate.
The slave responds with exception response 0x01: "Invalid function".	The master is trying to use an unsupported function in CIM/CIU 260.	See section Modbus RTU telegram examples for supported function codes. Note that reading and writing coils are not supported, so only register functions and diagnostics are valid.
The slave responds with exception response 0x02: "Invalid data address".	The master is trying to read or write an invalid data address. If a master tries to read register addresses that are not listed in the tables, the slave responds with this exception response. Some masters may automatically try to read large blocks in one telegram, which will cause problems if some of the registers in the block are not supported. An example would be reading the CIM configuration and CIM status register blocks in one telegram. This is not possible since there are unused addresses among the blocks.	Avoid reading or writing invalid data addresses. Make sure that register X is addressed as X - 1 in Modbus telegrams, according to the Modbus standard.
The slave returns data value 0xFFFF (65535).	The availability of data will in some cases depend on a configuration or the actual conditions of the system. For example trying to request data from an E-pump which is not present will return "data not available" (0xFFFF).	See section Modbus register addresses for available data.
	With its present configuration or operating mode, the E-pump is unable to supply the requested data.	See section Pump data register block for data values that require a sensor.
The slave does not react to control actions or to writing of settings.	CIU 260 is SCADA PIN-code-protected (GeneralStatus register 00029, bit 0: 1), and an incorrect PIN code has been written.	Write access requires a correct PIN code (ScadaPinCode, register 00011). Writing the correct PIN code value triggers the write access control, and write access is open, which can be verified with GeneralStatus, register 00029, bit 1: 1.

Related information

[6. CIM 260 3G/4G cellular Modbus setup](#)

[9.7 Pump data register block](#)

[13. Modbus RTU telegram examples](#)

14.3 CIM 500

You can detect faults in CIM 500 by observing the status of the two communication LEDs.

Related information

[4.4 CIM 500 Modbus TCP](#)

14.3.1 LED status

CIU 500 connected to an E-pump

Fault (LED status)	Possible cause	Remedy
Both LED1 and LED2 remain off when the power supply is connected.	CIM 500 is fitted incorrectly in the Grundfos product. CIM 500 is defective.	Check that CIM 500 is fitted and connected correctly. Replace CIM 500.
LED2 for internal communication is flashing red.	No internal communication between CIM 500 and the Grundfos product.	Check that CIM 500 is fitted correctly in the Grundfos product.
LED2 for internal communication is permanently red.	CIM 500 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
The Modbus LED1 is permanently red.	Fault in the CIM 500 Modbus TCP configuration.	Check that the rotary switch SW1 is set to 1. Check that Modbus TCP IP address configuration is correct.
LED1 is permanently red and green at the same time.	Error in the firmware download.	Use the webserver to download the firmware again.
LED2 is permanently red and green at the same time.	Memory fault.	Replace CIM 500.

CIM 500 fitted in CIU 500

Fault (LED status)	Possible cause	Remedy
Both LED1 and LED2 remain off when the power supply is connected.	CIU 500 is defective.	Replace CIU 500.
LED2 for internal communication is flashing red.	No internal communication between CIU 500 and the Grundfos product.	<ul style="list-style-type: none"> Check the cable connection between the Grundfos product and CIU 500. Check that the individual conductors have been fitted correctly, for example not reversed. Check the power supply to the Grundfos product.
LED2 for internal communication is permanently red.	CIM 500 does not support the Grundfos product connected.	Contact the nearest Grundfos company.
The Ethernet LED1 is permanently red.	Fault in the CIM 500 Modbus TCP configuration.	Check that the rotary switch SW1 is set to 1. Check that Modbus TCP IP address configuration is correct.
LED1 is permanently red and green at the same time.	Error in the firmware download.	Use the webserver to download the firmware again.
LED2 is permanently red and green at the same time.	Memory fault.	Replace CIM 500.

14.3.2 CIM/CIU 500 Modbus TCP communication faults

Fault	Possible cause	Remedy
The slave does not respond to telegrams.	Configuration or wiring error.	<ul style="list-style-type: none"> Check the visual diagnostics on the Modbus slave. Normal conditions are that the Grundfos GENIbus LED2 is permanently green and that the Modbus TCP LED1 is off or flashing green. If not, see section LED status. Make sure that the cable between the Modbus TCP master and the Modbus slave is connected correctly. Ensure that the slave IP address is configured correctly, and that the correct slave IP address is used in the Modbus master poll.
The slave responds with exception response 0x01 "Invalid function".	The master is trying to use an unsupported function in CIM/CIU 500.	Modbus function code overview for supported function codes. Note that reading and writing coils are not supported, so only register functions and diagnostics are valid.
The slave responds with exception response 0x02 "Invalid data address".	The master is trying to read or write an invalid data address. If a master tries to read register addresses that are not listed in the tables, the slave responds with this exception response. Some masters may automatically try to read large blocks in one telegram, which will cause problems if some of the registers in the block are not supported. An example would be reading the CIM configuration and CIM status blocks in one telegram. This is not possible since there are unused addresses among the blocks.	Avoid reading or writing invalid data addresses. Ensure that a block of registers starting at address X is addressed as X - 1 in Modbus telegrams, according to the Modbus standard.
	The register address offset may have been changed from default.	Read the holding register at address 00002 "Register Offset" to see if this value is different from 0. If so, write the value 0 to this address to make the slave return to the default used in this functional profile.
The slave returns data value 0xFFFF (65535).	The value is unavailable. A data value of 0xFFFF does not necessarily indicate an error condition. It means that the value is unavailable from the E-pump.	See section Modbus register addresses for available data.
	The E-pump is not configured to show the value or lacks a sensor to read the value.	See section Pump data register block for data values that require a sensor.
The slave does not react to control actions or to writing of settings.	The E-pump might be in "Local" mode, in which case Operating mode, Control mode and Setpoint cannot be changed from bus. Register 00201 bit 8 AccessMode must be "1" (=Remote) for bus control to be active.	Set the E-pump in "Remote mode" by setting register 00101 bit 0 RemoteAccessReq to "1" (= Remote). The E-pump should show "Controlled from bus" when status is read in Grundfos GO.

Related information

[7.1 Connecting the Ethernet cable](#)

[7.3 Setting the IP addresses](#)

[8. Modbus function code overview](#)

[9.7 Pump data register block](#)

[14.3.1 LED status](#)

15. Modbus RTU rotary switch addresses

Modbus address	SW6	SW7	Modbus address	SW6	SW7	Modbus address	SW6	SW7	Modbus address	SW6	SW7	Modbus address	SW6	SW7
1	0	1	51	3	3	101	6	5	151	9	7	201	C	9
2	0	2	52	3	4	102	6	6	152	9	8	202	C	A
3	0	3	53	3	5	103	6	7	153	9	9	203	C	B
4	0	4	54	3	6	104	6	8	154	9	A	204	C	C
5	0	5	55	3	7	105	6	9	155	9	B	205	C	D
6	0	6	56	3	8	106	6	A	156	9	C	206	C	E
7	0	7	57	3	9	107	6	B	157	9	D	207	C	F
8	0	8	58	3	A	108	6	C	158	9	E	208	D	0
9	0	9	59	3	B	109	6	D	159	9	F	209	D	1
10	0	A	60	3	C	110	6	E	160	A	0	210	D	2
11	0	B	61	3	D	111	6	F	161	A	1	211	D	3
12	0	C	62	3	E	112	7	0	162	A	2	212	D	4
13	0	D	63	3	F	113	7	1	163	A	3	213	D	5
14	0	E	64	4	0	114	7	2	164	A	4	214	D	6
15	0	F	65	4	1	115	7	3	165	A	5	215	D	7
16	1	0	66	4	2	116	7	4	166	A	6	216	D	8
17	1	1	67	4	3	117	7	5	167	A	7	217	D	9
18	1	2	68	4	4	118	7	6	168	A	8	218	D	A
19	1	3	69	4	5	119	7	7	169	A	9	219	D	B
20	1	4	70	4	6	120	7	8	170	A	A	220	D	C
21	1	5	71	4	7	121	7	9	171	A	B	221	D	D
22	1	6	72	4	8	122	7	A	172	A	C	222	D	E
23	1	7	73	4	9	123	7	B	173	A	D	223	D	F
24	1	8	74	4	A	124	7	C	174	A	E	224	E	0
25	1	9	75	4	B	125	7	D	175	B	F	225	E	1
26	1	A	76	4	C	126	7	E	176	B	0	226	E	2
27	1	B	77	4	D	127	7	F	177	B	1	227	E	3
28	1	C	78	4	E	128	8	0	178	B	2	228	E	4
29	1	D	79	4	F	129	8	1	179	B	3	229	E	5
30	1	E	80	5	0	130	8	2	180	B	4	230	E	6
31	1	F	81	5	1	131	8	3	181	B	5	231	E	7
32	2	0	82	5	2	132	8	4	182	B	6	232	E	8
33	2	1	83	5	3	133	8	5	183	B	7	233	E	9
34	2	2	84	5	4	134	8	6	184	B	8	234	E	A
35	2	3	85	5	5	135	8	7	185	B	9	235	E	B
36	2	4	86	5	6	136	8	8	186	B	A	236	E	C
37	2	5	87	5	7	137	8	9	187	B	B	237	E	D
38	2	6	88	5	8	138	8	A	188	B	C	238	E	E
39	2	7	89	5	9	139	8	B	189	B	D	239	E	F
40	2	8	90	5	A	140	8	C	190	B	E	240	F	0
41	2	9	91	5	B	141	8	D	191	B	F	241	F	1
42	2	A	92	5	C	142	8	E	192	C	0	242	F	2
43	2	B	93	5	D	143	8	F	193	C	1	243	F	3
44	2	C	94	5	E	144	9	0	194	C	2	244	F	4
45	2	D	95	5	F	145	9	1	195	C	3	245	F	5
46	2	E	96	6	0	146	9	2	196	C	4	246	F	6
47	2	F	97	6	1	147	9	3	197	C	5	247	F	7
48	3	0	98	6	2	148	9	4	198	C	6			
49	3	1	99	6	3	149	9	5	199	C	7			
50	3	2	100	6	4	150	9	6	200	C	8			

Example: To set the slave address to the value 142, set the rotary switches SW6 and SW7 to "8" and "E", respectively. Note that 0 is not a valid slave address as this is used for broadcasting.



It is very important to ensure that two devices do not have the same address on the network. If two devices have the same address, the result will be an abnormal behaviour of the whole serial bus.

16. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities. The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at www.grundfos.com/product-recycling.

17. Grundfos alarm and warning codes

This is a complete list of alarm and warning codes for Grundfos products. For the codes supported by this product, see the alarms and warnings section.

Code	Description	Code	Description	Code	Description
1	Leakage current	2	Missing phase	3	External fault signal
4	Too many restarts	5	Regenerative braking	6	Mains fault
7	Too many hardware shutdowns	8	PWM switching frequency reduced	9	Phase sequence reversal
10	Communication fault, pump	11	Water-in-oil fault (motor oil)	12	Time for service (general service information)
13	Moisture alarm, analog	14	Electronic DC-link protection activated (ERP)	15	Communication fault, main system (SCADA)
16	Other	17	Performance requirement cannot be met	18	Commanded alarm standby (trip)
19	Diaphragm break (dosing pump)	20	Insulation resistance low	21	Too many starts per hour
22	Moisture switch alarm, digital	23	Smart trim gap alarm	24	Vibration
25	Setup conflict	26	Load continues even if the motor has been switched off	27	External motor protector activated (for example MP 204)
28	Battery low	29	Turbine operation (impellers forced backwards)	30	Change bearings (specific service information)
31	Change varistor(s) (specific service information)	32	Overvoltage	33	Soon time for service (general service information)
34	No priming water	35	Gas in pump head, de-aerating problem	36	Outlet valve leakage
37	Inlet valve leakage	38	Vent valve defective	39	Valve stuck or defective
40	Undervoltage	41	Undervoltage transient	42	Cut-in fault (dV/dt)
43	-	44	-	45	Voltage asymmetry
46	-	47	-	48	Overload
49	Overcurrent (i_line, i_dc, i_mo)	50	Motor-protection function, general shutdown (MPF)	51	Blocked motor or pump
52	Motor slip high	53	Stalled motor	54	Motor-protection function, 3 sec. limit
55	Motor current protection activated (MCP)	56	Underload	57	Dry running
58	Low flow	59	No flow	60	Low input power
61	-	62	-	63	-
64	-	65	Motor temperature 1 (t_m or t_mo or t_mo1)	66	Temperature, control electronics (t_e)
67	Temperature too high, internal frequency converter module (t_m)	68	External temperature or water temperature (t_w)	69	Thermal relay 1 in motor, for example Klixon
70	Thermal relay 2 in motor, for example thermistor	71	Motor temperature 2 (Pt100, t_mo2)	72	Hardware fault, type 1
73	Hardware shutdown (HSD)	74	Internal supply voltage too high	75	Internal supply voltage too low
76	Internal communication fault	77	Communication fault, twin-head pump	78	Fault, speed plug
79	Functional fault, add-on module	80	Hardware fault, type 2	81	Verification error, data area (RAM)
82	Verification error, code area (ROM, FLASH)	83	Verification error, FE parameter area (EEPROM)	84	Memory access error
85	Verification error, BE parameter area (EEPROM)	86	Fault (add-on) I/O module	87	-
88	Sensor fault	89	Signal fault, (feedback) sensor 1	90	Signal fault, speed sensor
91	Signal fault, temperature sensor 1	92	Calibration fault, (feedback) sensor	93	Signal fault, sensor 2
94	Limit exceeded, sensor 1	95	Limit exceeded, sensor 2	96	Setpoint signal outside range
97	Signal fault, setpoint input	98	Signal fault, input for setpoint influence	99	Signal fault, input for analog setpoint
100	RTC time synchronisation with cellular network occurred	101	-	102	Dosing pump not ready
103	Emergency stop	104	Software shutdown	105	Electronic rectifier protection activated (ERP)
106	Electronic inverter protection activated (EIP)	107	-	108	-
109	-	110	Skew load, electrical asymmetry	111	Current asymmetry
112	Cosφ too high	113	Cosφ too low	114	Motor heater function activated (frost protection)
115	Too many grinder reversals or grinder reversal attempt failed	116	Grinder motor overtemperature	117	Intrusion (door opened)
118	Signal fault, hydrogen sulfide H ₂ S sensor	119	Signal fault, analog input AI4	120	Auxiliary winding fault (single phase motors)

Code	Description	Code	Description	Code	Description
121	Auxiliary winding current too high (single-phase motors)	122	Auxiliary winding current too low (single-phase motors)	123	Start capacitor, low (single-phase motors)
124	Run capacitor, low (single-phase motors)	125	Signal fault, outdoor temperature sensor	126	Signal fault, air temperature sensor
127	Signal fault, shunt relative pressure sensor	128	Strainer clogged	129	-
130	-	131	-	132	-
133	-	134	-	135	-
136	-	137	-	138	-
139	-	140	-	141	-
142	-	143	-	144	Motor temperature 3 (Pt100, t_mo3)
145	Bearing temperature high (Pt100), in general or top bearing	146	Bearing temperature high (Pt100), middle bearing	147	Bearing temperature high (Pt100), bottom bearing
148	Motor bearing temperature high (Pt100) in drive end (DE)	149	Motor bearing temperature high (Pt100) in non-drive end (NDE)	150	Fault (add-on) pump module
151	Fault, display (HMI)	152	Communication fault, add-on module	153	Fault, analog output
154	Communication fault, display	155	Inrush fault	156	Communication fault, internal frequency converter module
157	Real-time clock out of order	158	Hardware circuit measurement fault	159	CIM fault (Communication Interface Module)
160	Cellular modem, SIM card fault	161	Sensor supply fault, 5 V	162	Sensor supply fault, 24 V
163	Measurement fault, motor protection	164	Signal fault, LiqTec sensor	165	Signal fault, analog input 1
166	Signal fault, analog input 2	167	Signal fault, analog input 3	168	Signal fault, pressure sensor
169	Signal fault, flow sensor	170	Signal fault, water-in-oil (WIO) sensor	171	Signal fault, moisture sensor
172	Signal fault, atmospheric pressure sensor	173	Signal fault, rotor position sensor (Hall sensor)	174	Signal fault, rotor origo sensor
175	Signal fault, temperature sensor 2 (t_mo2)	176	Signal fault, temperature sensor 3 (t_mo3)	177	Signal fault, Smart trim gap sensor
178	Signal fault, vibration sensor	179	Signal fault, bearing temperature sensor (Pt100), general or top bearing	180	Signal fault, bearing temperature sensor (Pt100), middle bearing
181	Signal fault, PTC sensor (short-circuited)	182	Signal fault, bearing temperature sensor (Pt100), bottom bearing	183	Signal fault, extra temperature sensor
184	Signal fault, general-purpose sensor	185	Unknown sensor type	186	Signal fault, power meter sensor
187	Signal fault, energy meter	188	Signal fault, user-defined sensor	189	Signal fault, level sensor
190	Limit exceeded, sensor 1 (for example alarm level in WW application)	191	Limit exceeded, sensor 2 (for example high level in WW application)	192	Limit exceeded, sensor 3 (for example overflow level in WW application)
193	Limit exceeded, sensor 4 (for example low level in WW/tank filling application)	194	Limit exceeded, sensor 5	195	Limit exceeded, sensor 6
196	Operation with reduced efficiency	197	Operation with reduced pressure	198	Operation with increased power consumption
199	Process out of range (monitoring, estimation, calculation, control)	200	Application alarm	201	External sensor input high
202	External sensor input low	203	Alarm on all pumps	204	Inconsistency between sensors
205	Level float switch sequence inconsistency	206	Water shortage, level 1	207	Water leakage
208	Cavitation	209	Non-return valve fault	210	High pressure
211	Low pressure	212	Diaphragm tank precharge pressure out of range	213	VFD not ready
214	Water shortage, level 2	215	Soft pressure buildup time-out	216	Pilot pump alarm
217	Alarm, general-purpose sensor high	218	Alarm, general-purpose sensor low	219	Pressure relief not adequate
220	Fault, motor contactor feedback	221	Fault, mixer contactor feedback	222	Time for service, mixer
223	Time for service, mixer	224	Pump fault, due to auxiliary component or general fault	225	Communication fault, pump module
226	Communication fault, I/O module	227	Combi event	228	Night flow max. limit exceeded
229	Water on floor	230	Network alarm	231	Ethernet: No IP address from DHCP server
232	Ethernet: Auto-disabled due to misuse	233	Ethernet: IP address conflict	234	Backup pump alarm
235	Gas detected	236	Pump 1 fault	237	Pump 2 fault
238	Pump 3 fault	239	Pump 4 fault	240	Lubricate bearings (specific service information)
241	Motor phase failure	242	Automatic motor model recognition failed	243	Motor relay has been forced (manually operated or commanded)

Code	Description	Code	Description	Code	Description
244	Fault, On/Off/Auto switch	245	Pump continuous runtime too long	246	User-defined relay has been forced (manually operated or commanded)
247	Power-on notice, (device or system has been switched off)	248	Fault, battery/UPS	249	User-defined event 1
250	User-defined event 2	251	User-defined event 3	252	User-defined event 4
253	SMS data from DDD sensor not received within time limit	254	Inconsistent data model		

A.1. Webserver configuration


The built-in webserver offers easy monitoring of the CIM 500 module and makes it possible to configure the selected Industrial Ethernet protocol. Using the webserver, you can also update the firmware of the CIM 500 module and store or restore settings, among other functions.

To connect a PC to CIM 500, proceed as follows:

1. Connect the PC and the module using an Ethernet cable.
2. Configure the Ethernet port of the PC to the same subnetwork as CIM 500, for example 192.168.1.101.
3. Open a standard Internet browser and type 192.168.1.100 in the URL field.

A.1.1. How to configure an IP address on your PC using Windows 10

1. Search for "Ethernet" in Windows.
2. Select "Change Ethernet setting".
3. Select "Change adapter options".
4. Right-click "Ethernet" and select "Properties".
5. Select properties for "Internet Protocol Version 4 (TCP/IPv4)".
6. Select the "Alternate Configuration" tab and enter the user-configured IP address and subnet mask you would like to assign to your PC.

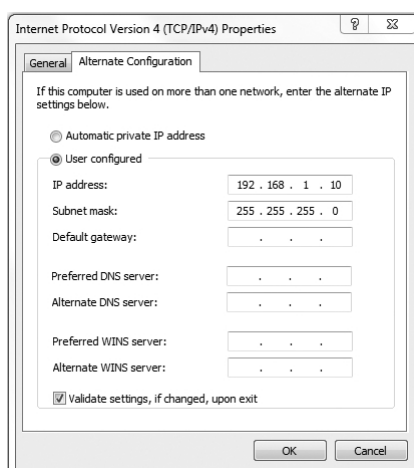



Example from windows 10

TM057422

A.2. Login

For administration of username and password, see also A. 4. User Management.

 If you experience problems with logging in to the webserver after a firmware update, perform a factory reset.



Information

System

Version

Licence

Login

Service Info

Contact

Login

First-time login requires password to be changed.

Username:

admin

Password :

New password :

Confirm password :

Submit

New password requirements:

* Minimum 8 and maximum 20 characters.

* Minimum 1 lower case alphabetic character.

* Minimum 1 upper case alphabetic character.

* Minimum 1 numeric or special character.

Login

Object	Description
Username	Enter username. Default: admin.
Password	Enter password. Default: Grundfos. After the first log in, you are forced to change the password. The password must contain: <ul style="list-style-type: none"> at least 8 and maximum 20 characters at least one lower case letter at least one upper case letter at least one numeric or special character. When logging in, you have four attempts before a back-off algorithm starts an exponentially increasing time delay between each attempt. Power cycling CIM 500 resets the back-off algorithm.

Related information

[A.4. User Management](#)

A.3. Modbus TCP configuration

This web page is used to configure all the parameters relevant to the Modbus TCP protocol standard.

GRUNDFOS

Information

System

Version

Licence

Configuration

Real Time Ethernet Protocol

Network Settings

GENpro TCP Protocol

User Management

Firmware Update / Restart

Logout

Service Info

Contact

Real Time Ethernet Protocol Configuration - Modbus TCP

Protocol Settings

TCP Port Number: 502

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Gateway: 0.0.0.0 x

Use DHCP: ☐

Submit

ATTENTION!

To optimize data security if using Modbus TCP via a cellular router Grundfos strongly recommends that the cellular data connection is based on a private APN with static IP and no access to public internet.

TM074523

Real Time Ethernet Protocol Configuration - Modbus TCP

Object	Description
TCP Port Number	The default value is 502, the official IANA-assigned Modbus TCP port number. The number 502 is always active implicitly. If you select another value in the webserver configuration field, both the new value and value 502 will be active.
IP Address	Configuration of the static IP address if a DHCP server is not used. Modbus TCP is not allowed to share the IP address with the CIM 500 webserver.
Subnet Mask	Configuration of the subnet mask if a DHCP server is not used.
Gateway	Configuration of the gateway address if a DHCP server is not used.
Use DHCP	The module can be configured to automatically obtain its Modbus TCP network settings from a DHCP server if available on the network. Default: DHCP disabled. "Use DHCP" is unchecked.

A.4. User Management

A login is required for any change of the CIM 500 settings, and this web page is used to configure the username and password.



It is only possible to configure one user.

User management

Related information

[A.2. Login](#)

A.5. Update

You can update the firmware by means of the built-in webserver. The binary file is supplied by Grundfos. To make installation and configuration easier, you can upload the configuration to a PC for backup or distribution to multiple modules.



If you experience problems with logging in to the webserver after a firmware update, perform a factory reset.

Update

Object	Description
Firmware	Path to binary firmware image that can be used for updating the module.
Update	Click [Update] to start the update. The procedure takes approximately one minute.
File	Path to the configuration file.
Download to module	Click here to transfer the configuration file to the module.
Upload from device	Click here to upload the configuration of the module to a file on your PC.
Restart module	By pressing this button, the CIM 500 module performs a power-up reset.

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Industrias
1619 - Garín Pcia. de B.A.
Tel.: +54-3327 414 444
Fax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Tel.: +61-8-8461-4611
Fax: +61-8-8340-0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Fax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomsesteenweg 81-83
B-2630 Aartselaar
Tel.: +32-3-870 7300
Fax: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, БЦ «Порт»
Тел.: +375 17 397 397 3
+375 17 397 397 4
Факс: +375 17 397 397 1
E-mail: minsk@grundfos.com

Bosnia and Herzegovina

GRUNDFOS Sarajevo
Zmaj od Bosne 7-7A
BiH-71000 Sarajevo
Tel.: +387 33 592 480
Fax: +387 33 590 465
www.ba.grundfos.com
E-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Tel.: +55-11 4393 5533
Fax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel.: +359 2 49 22 200
Fax: +359 2 49 22 201
E-mail: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Tel.: +1-905 829 9533
Fax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
10F The Hub, No. 33 Suhong Road
Minhang District
Shanghai 201106 PRC
Tel.: +86 21 612 252 22
Fax: +86 21 612 253 33

Columbia

GRUNDFOS Colombia S.A.S.
Km 1.5 via Siberia-Cota Conj. Potrero
Chico,
Parque Empresarial Arcos de Cota Bod. 1A.
Cota, Cundinamarca
Tel.: +57(1)-2913444
Fax: +57(1)-8764586

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Tel.: +385 1 6595 400
Fax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS Sales Czechia and Slovakia
s.r.o.
Čajkovského 21
779 00 Olomouc
Tel.: +420-585-716 111

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tel.: +45-87 50 50 50
Fax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel.: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Trukkikuja 1
FI-01360 Vantaa
Tel.: +358-(0) 207 889 500

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tel.: +33-4 74 82 15 15
Fax: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Fax: +49-(0) 211 929 69-3799
E-mail: infoservice@grundfos.de
Service in Deutschland:
kundendienst@grundfos.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Tel.: +0030-210-66 83 400
Fax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor, Siu Wai industrial
Centre
29-33 Wing Hong Street & 68 King Lam
Street, Cheung Sha Wan
Kowloon
Tel.: +852-27861706 / 27861741
Fax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Tópark u. 8
H-2045 Törökbálint
Tel.: +36-23 511 110
Fax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahablipuram Road
Thoraiakkam
Chennai 600 097
Tel.: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Graha intirub Lt. 2 & 3
Jln. Cililitan Besar No.454. Makasar,
Jakarta Timur
ID-Jakarta 13650
Tel.: +62 21-469-51900
Fax: +62 21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Tel.: +353-1-4089 800
Fax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Fax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
1-2-3, Shin-Miyakoda, Kita-ku
Hamamatsu
431-2103 Japan
Tel.: +81 53 428 4760
Fax: +81 53 428 5005

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Tel.: +82-2-5317 600
Fax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60
LV-1035, Rīga,
Tel.: + 371 714 9640, 7 149 641
Fax: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel.: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie industrial Park
40150 Shah Alam, Selangor
Tel.: +60-3-5569 2922
Fax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México
S.A. de C.V.
Boulevard TLC No. 15
Parque industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Tel.: +52-81-8144 4000
Fax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Fax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Tel.: +64-9-415 3240
Fax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Strømsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tel.: +47-22 90 47 00
Fax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przeźmierowo
Tel.: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Fax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
S-PARK BUSINESS CENTER, Clădirea
A2, etaj 2
Str. Tipograflor, Nr. 11-15, Sector 1, Cod
013714
Bucuresti, Romania
Tel.: 004 021 2004 100
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
ул. Школьная, 39-41
Москва, RU-109544, Russia
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 8811
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Tel.: +381 11 2258 740
Fax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Tel.: +65-6681 9688
Fax: +65-6681 9689

Slovakia

GRUNDFOS s.r.o.
Prievozská 4D 821 09 BRATISLAVA
Tel.: +421 2 5020 1426
sk.grundfos.com

Slovenia

GRUNDFOS LJUBLJANA, d.o.o.
Leskoškova 9e, 1122 Ljubljana
Tel.: +386 (0) 1 568 06 10
Fax: +386 (0) 1 568 06 19
E-mail: tehnika-si@grundfos.com

South Africa

GRUNDFOS (PTY) LTD
16 Lascelles Drive, Meadowbrook Estate
1609 Germiston, Johannesburg
Tel.: (+27) 10 248 6000
Fax: (+27) 10 248 6002
E-mail: lgraddidge@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentequilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Fax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Fax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-44-806 8111
Fax: +41-44-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Tel.: +886-4-2305 0868
Fax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloei Phrakiat Rama 9 Road
Dokmai, Pravej, Bangkok 10250
Tel.: +66-2-725 8999
Fax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi
2. yol 200. Sokak No. 204
41490 Gebze/ Kocaeli
Tel.: +90 - 262-679 7979
Fax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

ТОВ "ГРУНДФОС УКРАЇНА"
Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Tel.: (+38 044) 237 04 00
Fax: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone, Dubai
Tel.: +971 4 8815 166
Fax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Tel.: +44-1525-850000
Fax: +44-1525-850011

U.S.A.

Global Headquarters for WU
856 Koomey Road
Brookshire, Texas 77423 USA
Phone: +1-630-236-5500

Uzbekistan

Grundfos Tashkent, Uzbekistan
The Representative Office of Grundfos
Kazakhstan in Uzbekistan
38a, Oybek street, Tashkent
Tel.: (+998) 71 150 3290 / 71 150 3291
Fax: (+998) 71 150 3292

98367081 03.2023
ECM: 1360614

Trademarks displayed in this material, including but not limited to Grundfos and the Grundfos logo, are registered trademarks owned by The Grundfos Group. © 2023 Grundfos Holding A/S, all rights reserved.